



Illustrated Parts List

Model Series

356700

TYPE NUMBERS
0100 through 0133.


TABLE OF CONTENTS

Air Cleaner	7
Alternator	6
Blower Housing	7
Camshaft	3
Carburetor	4
Carburetor Overhaul Kit	4
Crankcase Cover/Sump	2
Crankshaft	3
Controls	6
Cylinder	2
Cylinder Head	5
Electric Starter	12
Engine Gasket Set	2
Exhaust System	8
Flywheel	9
Fuel Supply	4
Governor Spring	6
Ignition	6
Intake Manifold	3
Lubrication	13
Piston/Rings/Connecting Rod	2
Rewind Starter	10
Shrouds	11
Valve Gasket Set	5



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

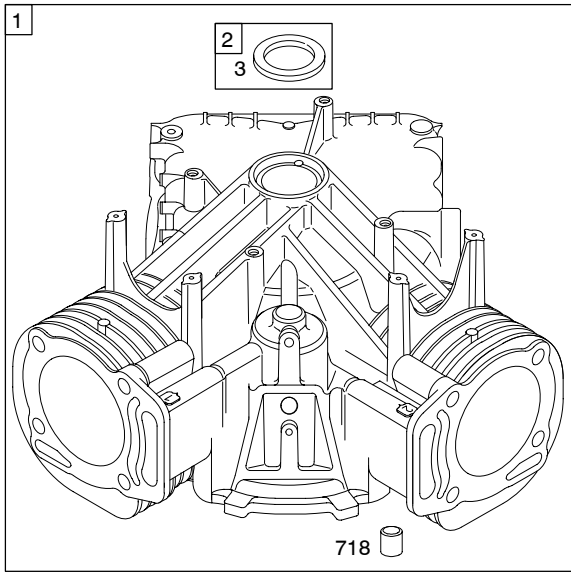

1319 WARNING LABEL

WARNING




 
 
 

Read and follow Operating Instructions before running engine.

Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.

Engines emit carbon monoxide, **DO NOT** run in enclosed area.

Muffler area temperature may exceed 150°F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.

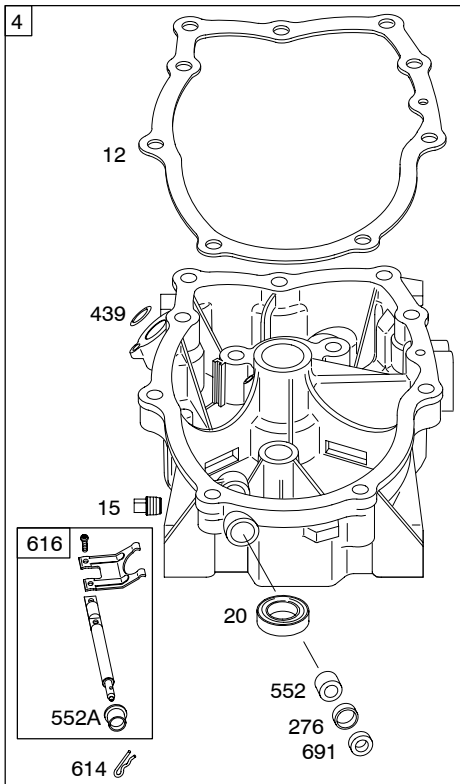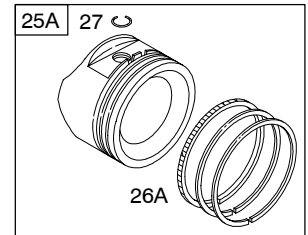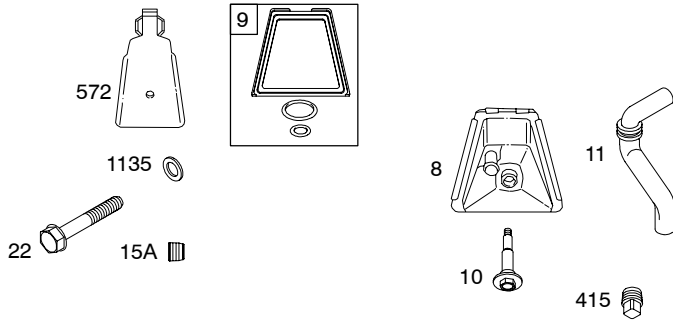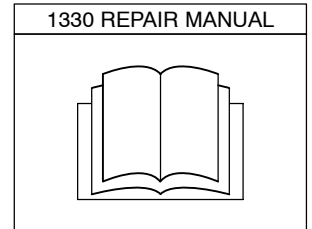

358 ENGINE GASKET SET

7

GRAPHOIL

3

12

20

51B

163

988

1022

273


 



276A

 
 




 
 



439

691


868


883A




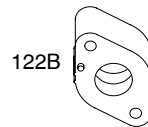
 
 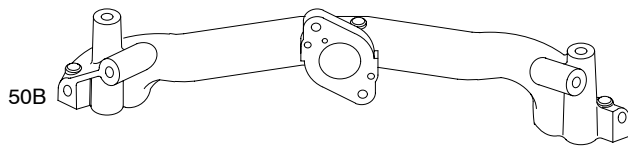
 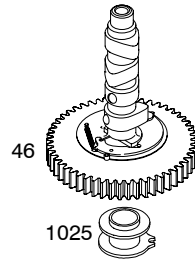
 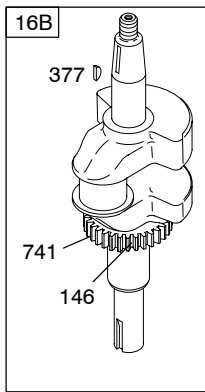

 


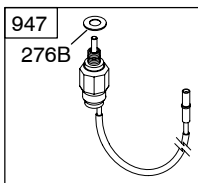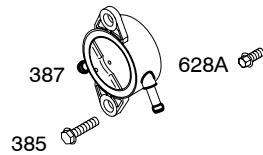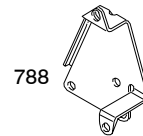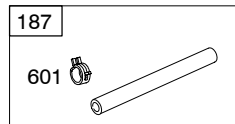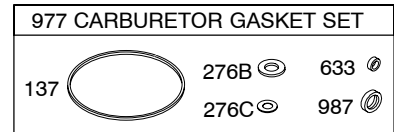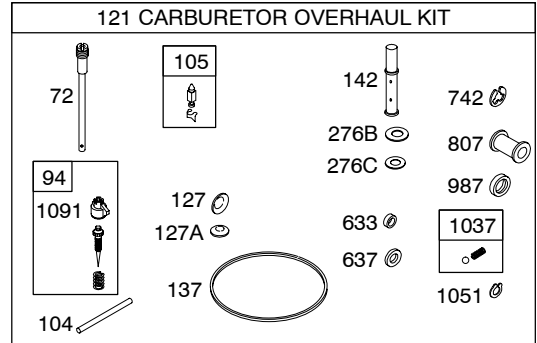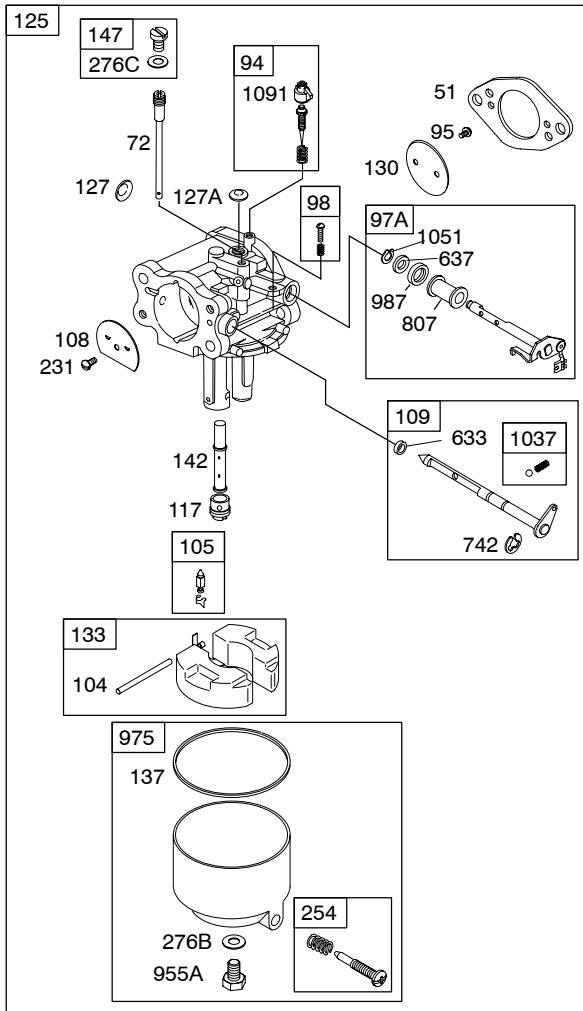
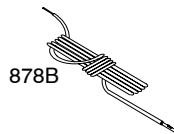



437 

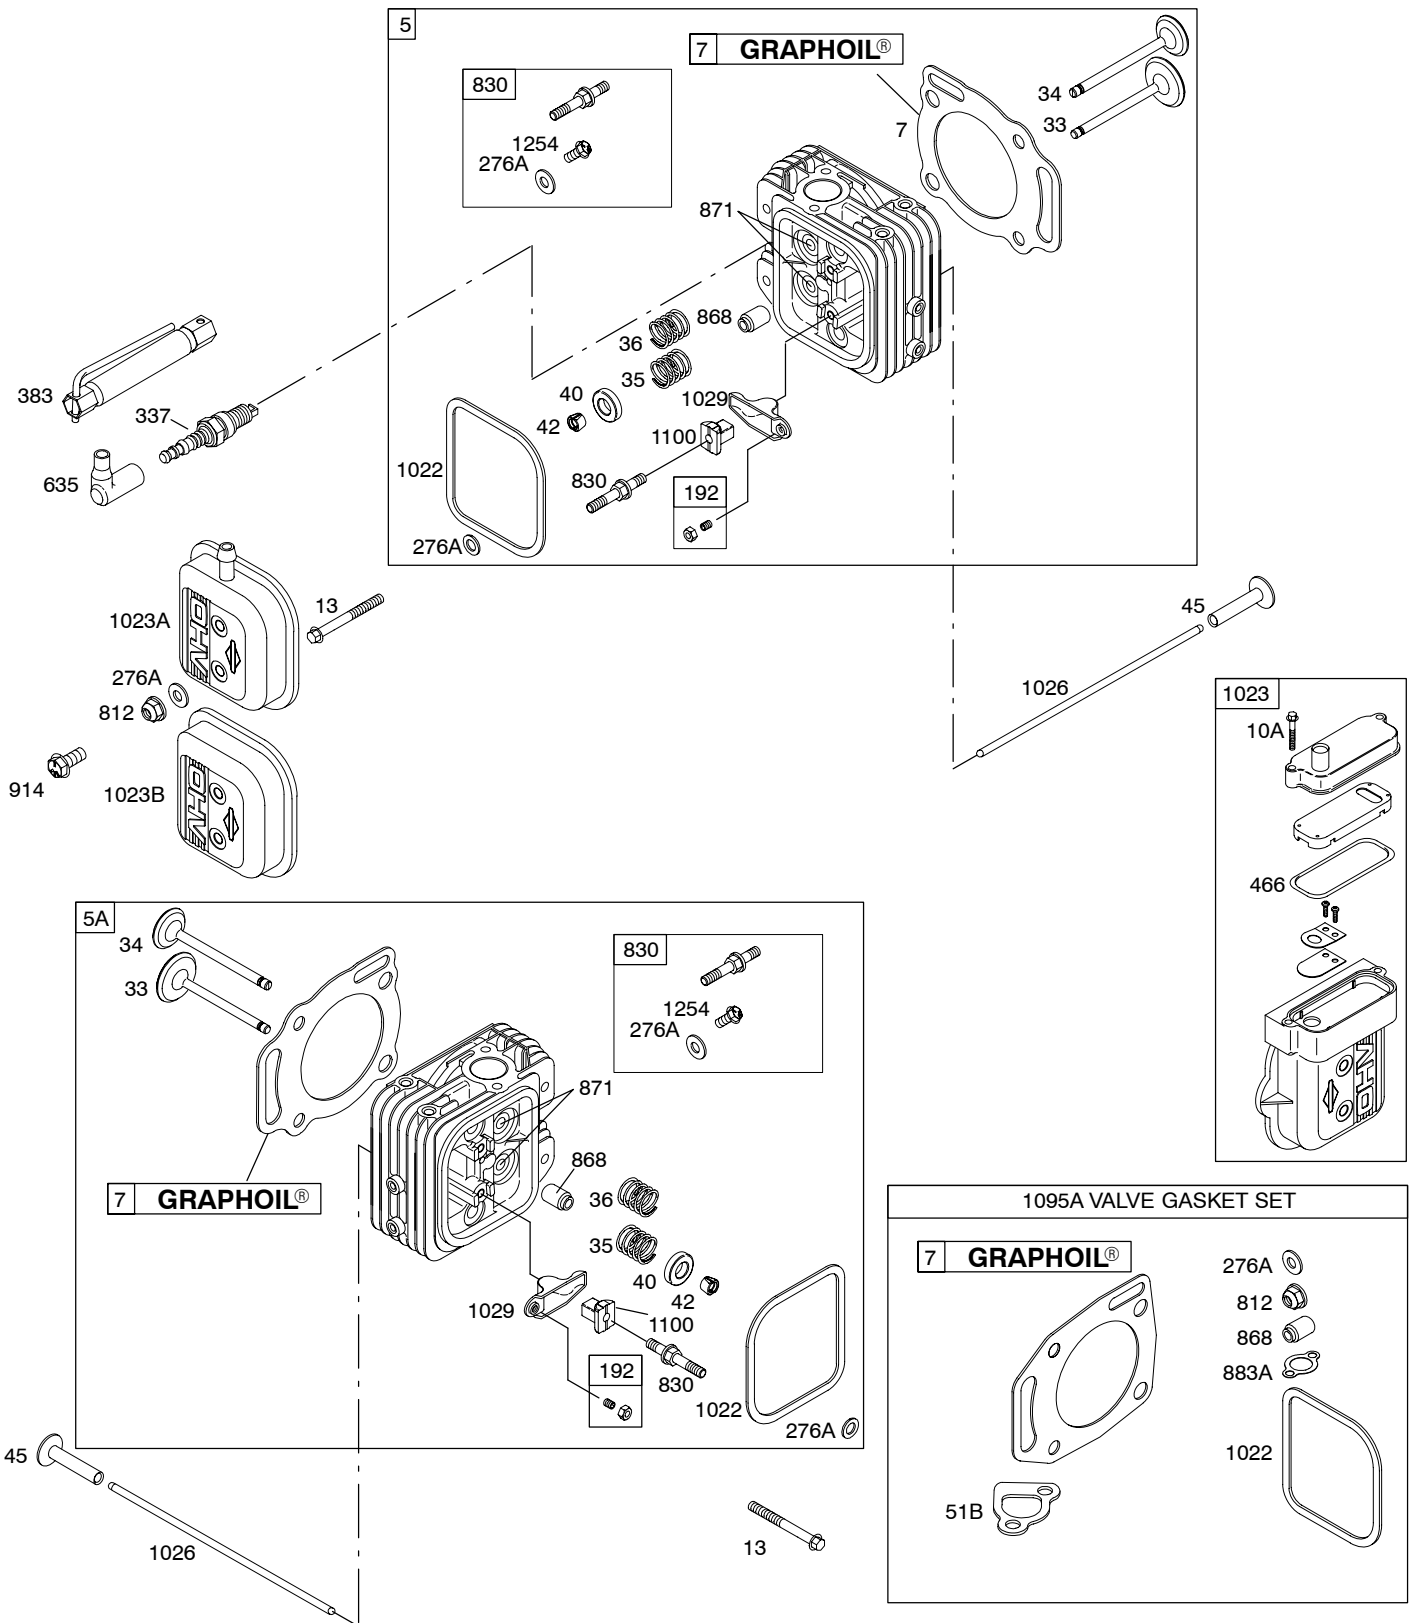



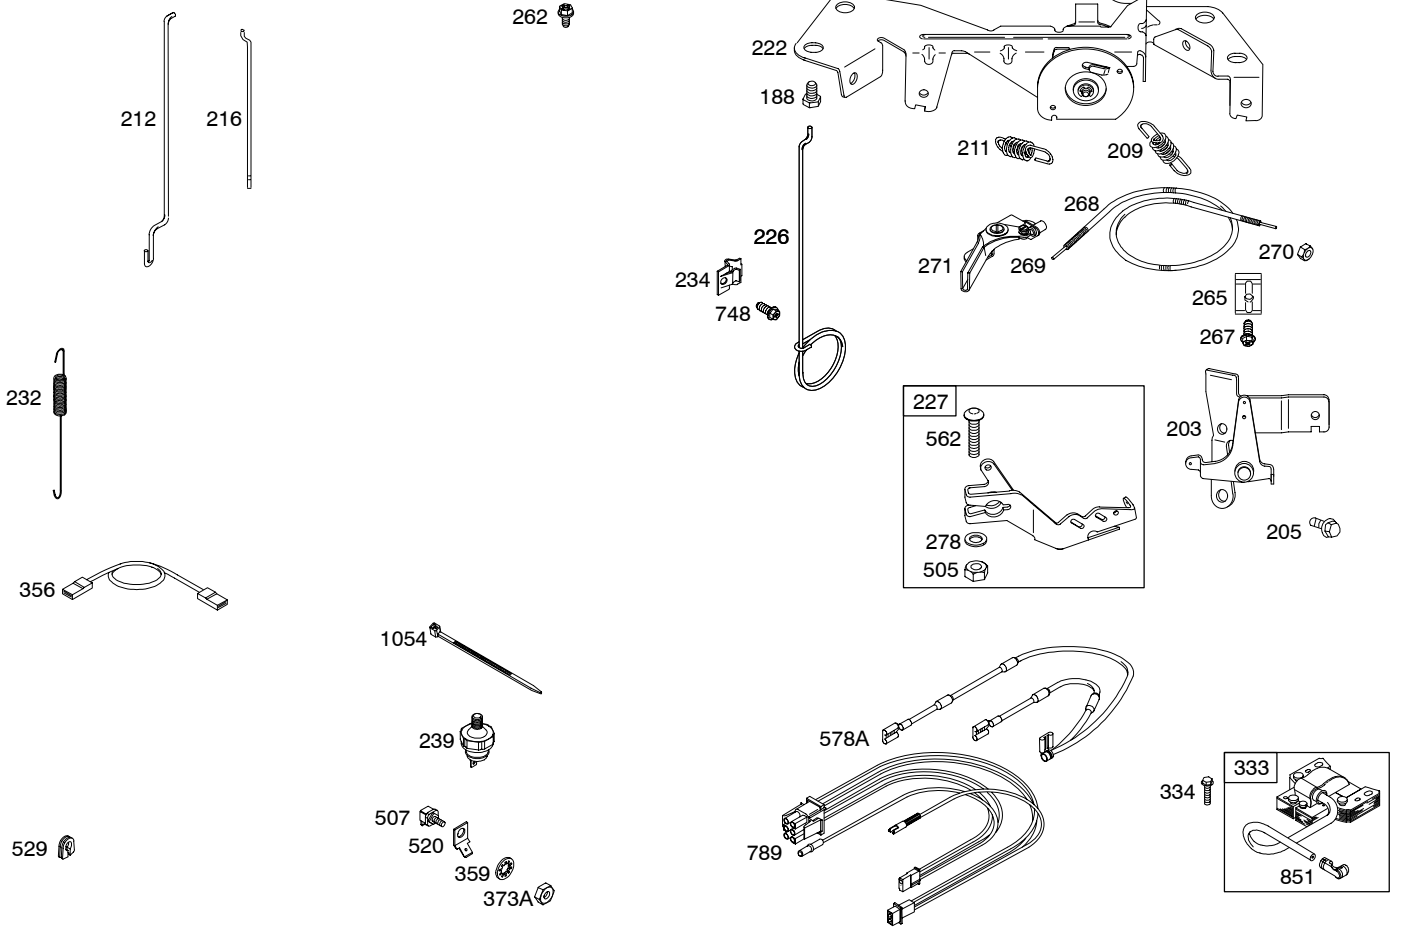


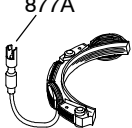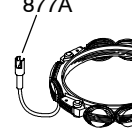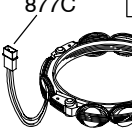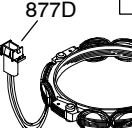


DC ONLY	TRI CIRCUIT	10 - 16 AMP	20 AMP
<div style="border: 1px solid black; padding: 2px; display: inline-block;">474A</div> 	<div style="border: 1px solid black; padding: 2px; display: inline-block;">474C</div> 	<div style="border: 1px solid black; padding: 2px; display: inline-block;">474D</div>  <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 20px;">1059</div>	<div style="border: 1px solid black; padding: 2px; display: inline-block;">474E</div>  <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 20px;">1059</div>
			
<p>NOTE: All stators use a No. 1119 mounting screw. </p>		 526 501	 526B 501B


 


 



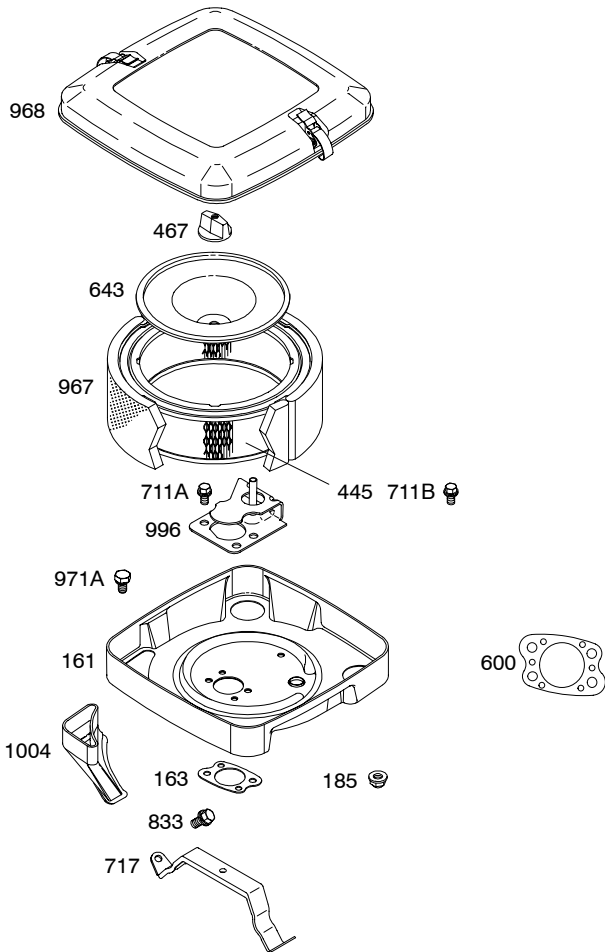




1036 EMISSIONS LABEL

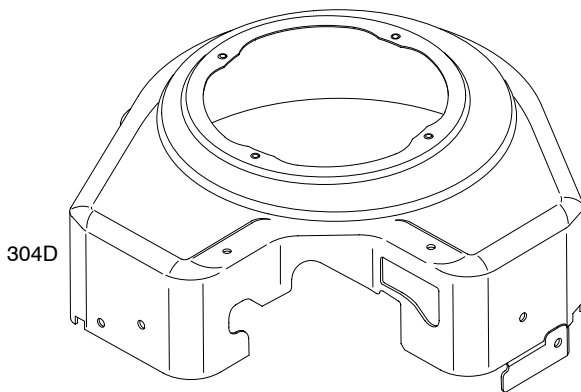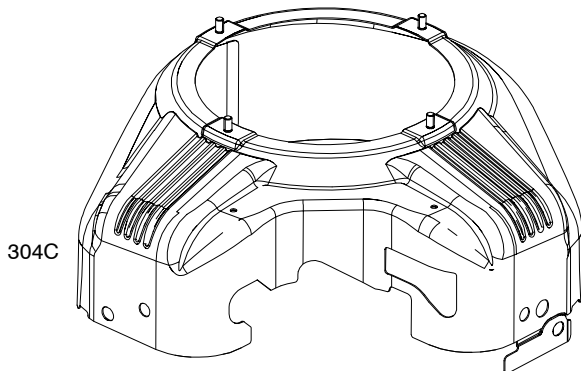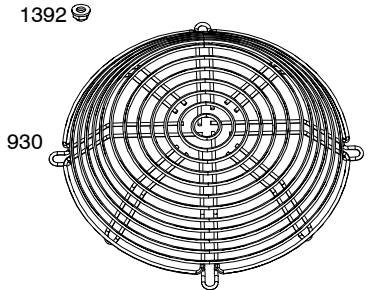

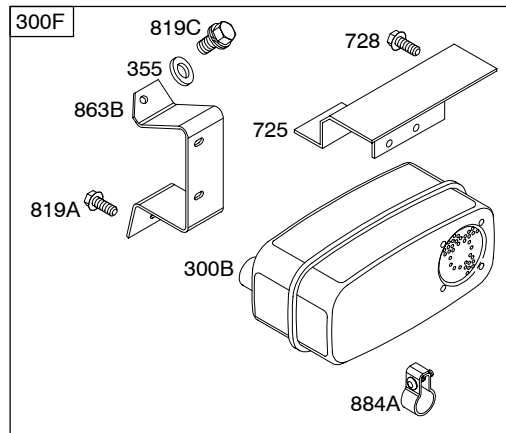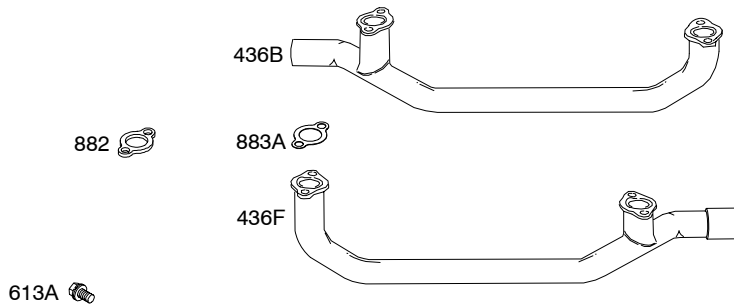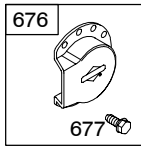


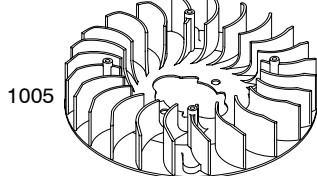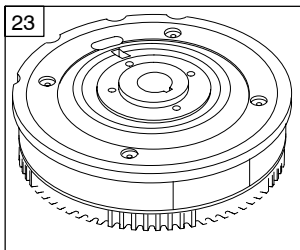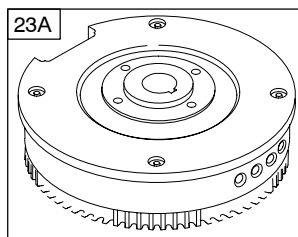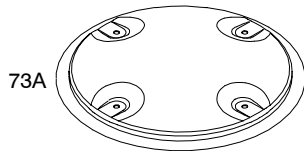



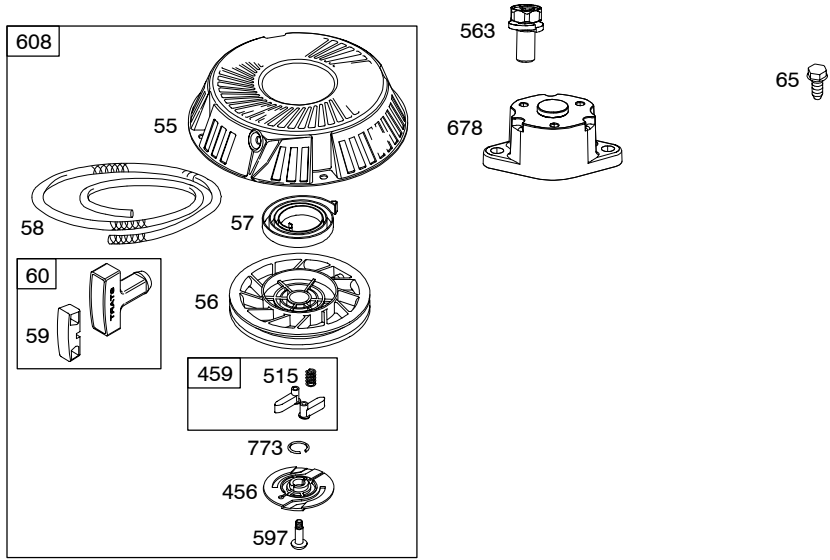


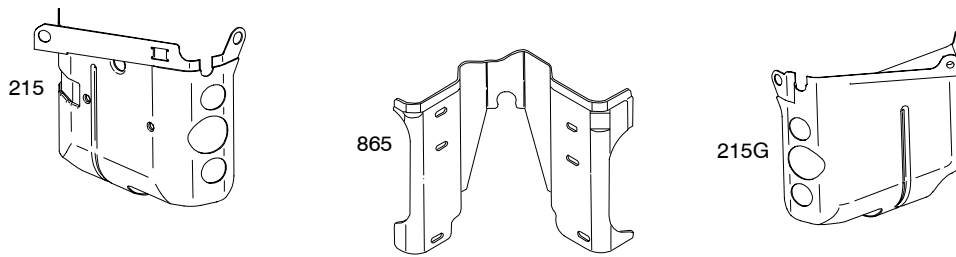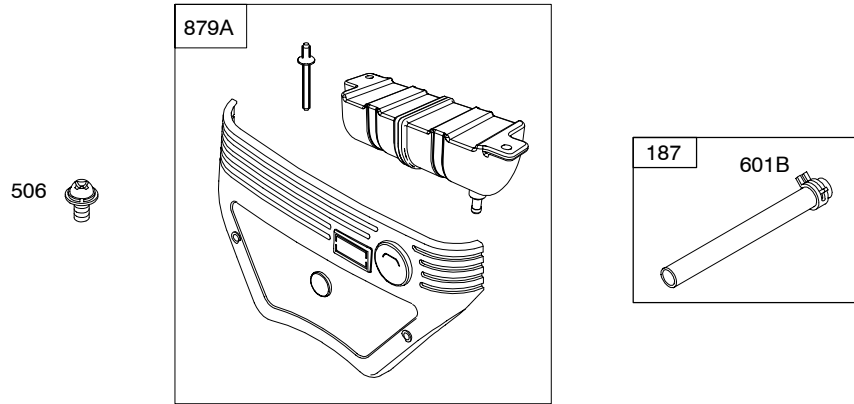


638A 

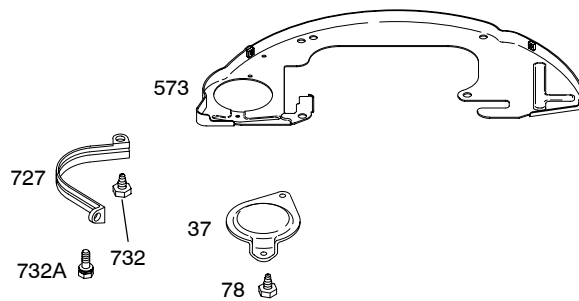

697 

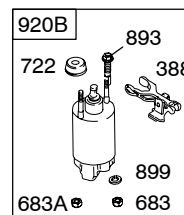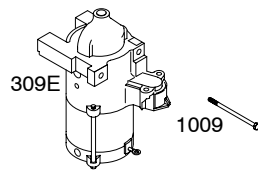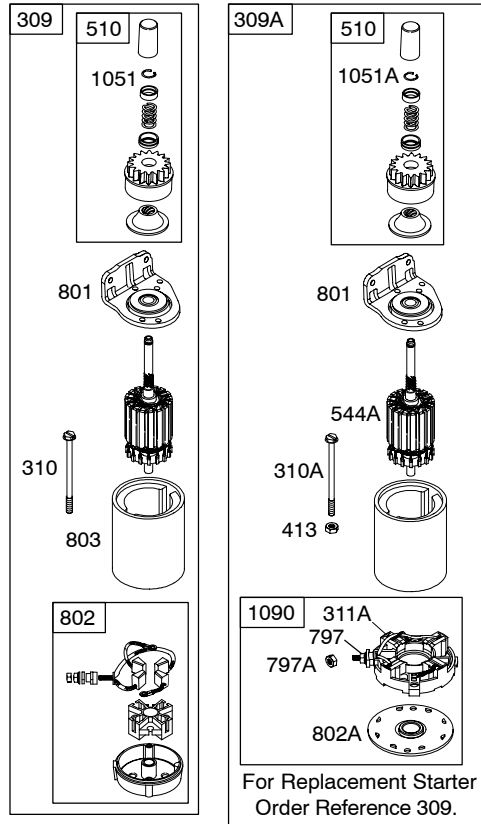

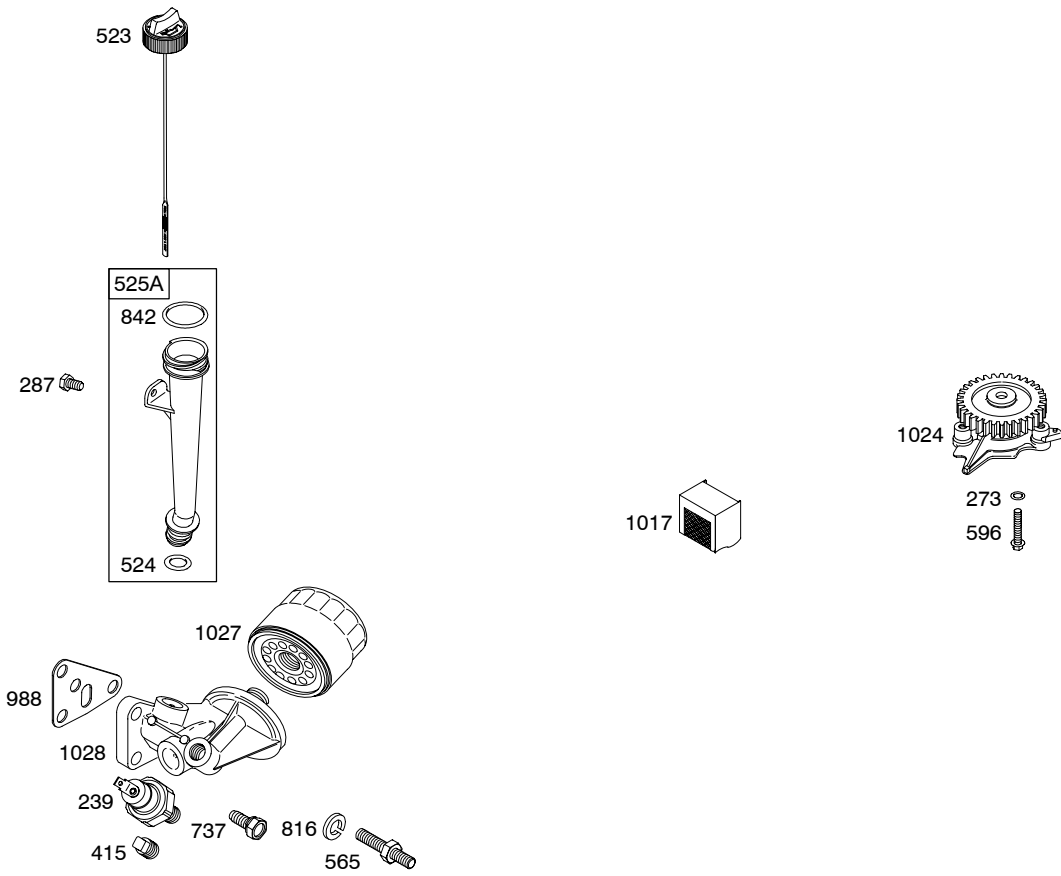

356700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692545	Cylinder Assembly ----- Note ----- Cylinder Assembly (NO LONGER AVAILABLE) Used on Type No(s). 0112.	23A	809236	Flywheel (Steel Ring Gear) ----- Note ----- 841050 Flywheel (Steel Ring Gear) Used on Type No(s). 0110.	55	691568	Housing-Rewind Starter
2	808534	Kit-Bushing/Seal (Magneto Side)	25A	808326	Piston Assembly (Standard) ----- Note ----- 808337 Piston Assembly (.020" Oversize)	56	692085	Pulley-Starter
3	★805101S	Seal-Oil (Magneto Side)	26A	807889	Ring Set (Standard) ----- Note ----- 807995 Ring Set (.020" Oversize)	57	692086	Spring-Rewind Starter
4	808846	Sump-Engine	27	690683	Lock-Piston Pin	58	66574	Rope-Starter
5	809185	Head-Cylinder (Cylinder 1)	28A	807886	Pin-Piston	59	805957	Insert-Grip
5A	809186	Head-Cylinder (Cylinder 2)	29	807900	Rod-Connecting (Standard) ----- Note ----- 807803 Rod- Connecting (.020" Undersize)	60	808167	Grip-Starter Rope
7	★△690888	Gasket-Cylinder Head (Graphoil)	32	690698	Screw (Connecting Rod)	65	690341	Screw (Rewind Starter)
8	808988	Breather Assembly	33	807681	Valve-Exhaust	72	●806480	Tube-Jet
9	★809094	Gasket-Breather	34	807680	Valve-Intake	73A	841440	Screen-Rotating (Used After Code Date 04011800). ----- Note -----
10	690751	Screw (Breather Assembly)	35	692084	Spring-Valve (Intake)	74	841441	Screen-Rotating (Used Before Code Date 04011900). 807111 Screen- Rotating (Used After Code Date 04011800). ----- Note -----
10A	806421	Screw (Breather Assembly)	36	692084	Spring-Valve (Exhaust)	78	690688	Screw (Rotating Screen) (Used After Code Date 04011800). ----- Note -----
11	806083	Tube-Breather	37	841309	Guard-Flywheel	94	●808374	Kit-Idle Mixture
11B	841017	Tube-Breather Used on Type No(s). 0117, 0132.	40	692058	Retainer-Valve	95	690728	Screw (Throttle Valve)
11C	841018	Tube-Breather Used on Type No(s). 0117.	42	807683	Keeper-Valve	97A	808375	Shaft-Throttle
11D	841019	Tube-Breather Used on Type No(s). 0117.	45	690977	Tappet-Valve	98	807705	Kit-Idle Speed
12	★842589	Gasket-Crankcase	46	691557	Camshaft	104	●690739	Pin-Float Hinge
13	692059	Screw (Cylinder Head) (86mm Long)	50B	690754	Manifold-Intake	105	●807706	Valve-Float Needle
15	690946	Plug-Oil Drain (Square Head)	51	691694	Gasket-Intake (Manifold/Carburetor Spacer)	108	690729	Valve-Choke
15A	691680	Plug-Oil Drain Used on Type No(s). 0117, 0120.	51B	★△692035	Gasket-Intake (Manifold/Heads)	109	807711	Shaft-Choke
16B	809807	Crankshaft	53	690746	Stud (Carburetor)	117	●806471	Jet-Main (Standard)
20	★805049S	Seal-Oil (PTO Side)	54	690676	Screw (Intake Manifold)	118A	807907	Jet-Main (High Altitude)
22	807362	Screw (Crankcase Cover/Sump)						
23	841728	Flywheel Used on Type No(s). 0117, 0120, 0121.						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095A.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
121	842886	Kit-Carburetor Overhaul	211	692069	Spring-Governed Idle	276	690704	Washer-Sealing (Crankcase Cover/Sump)
122B	690748	Spacer-Carburetor	212	690712	Link-Throttle			----- Note -----
125	808725	Carburetor	215	841232	Guide-Air (Cylinder #1)			807085 Washer-Sealing (Cylinder Head) (Used After Code Date 01120200).
127	690730	Plug-Welch (9mm Diameter)	215G	806546	Guide-Air (Cylinder #2)	276A	691766	Washer-Sealing (Used Before Code Date 01120300).
127A	690731	Plug-Welch (6.9mm Diameter)	216	690871	Link-Choke	276B	806476	Washer-Sealing (Float Bowl)
130	806470	Valve-Throttle			----- Note -----	276C	806477	Washer-Sealing (Carburetor Plug)
133	807710	Float-Carburetor			690705 Link-Choke Used on Type No(s). 0034, 0115, 0120, 0133.	278	842122	Washer (Governor Control Lever)
137	806481	Gasket-Float Bowl	222	808454	Bracket-Control	287	807084	Screw (Dipstick Tube)
142	691555	Nozzle-Carburetor (Standard)	226	692075	Rod-Hand Control	300B	498984	Muffler (Used on Type No(s). 0034, 0116, 0120, 0121, 0132, 0133.)
146	691639	Key-Timing	227	690236	Lever-Governor Control	300F	807752	Muffler (Used on Type No(s). 0116, 0120.)
147	807714	Jet-Pilot	231	690728	Screw (Choke Valve)	304C	842742	Housing-Blower (Used on Type No(s). 0046, 0116, 0121, 0130.)
151	841185	Stud (Exhaust Manifold) Used on Type No(s). 0115.	232	692073	Spring-Governor Link			----- Note -----
161	691561	Base-Air Cleaner (Metal)	233	691723	Clip-Control Rod			842742 Housing-Blower (Used After Code Date 05062200). Used on Type No(s). 0120.
163	692081	Gasket-Air Cleaner (Used With Metal Air Cleaner Base)	239	690233	Switch-Oil Pressure (Oil GARD Only)	304D	841397	Housing-Blower (Black)
185	690939	Nut (Air Cleaner Base)			----- Note -----			809178 Housing-Blower (Used on Type No(s). 0112.)
187	841858	Line-Fuel (Carburetor Cover/Reservior)	240A	691035	Filter-Fuel (Includes Paper Element With A 40 Micron Rating)			
187A	791745	Line-Fuel	254	807713	Drain-Carburetor Bowl			
188	692056	Screw (Control Bracket)	262	692083	Screw (Rod Bracket)			
192	807623	Adjuster-Rocker Arm	265	691024	Clamp-Casing			
203	808753	Crank-Bell	267	692083	Screw (Casing Clamp)			
		----- Note -----	268	691025	Casing-Control Wire (Cut To Required Length)			
		690923 Crank-Bell Used on Type No(s). 0034, 0115, 0120, 0133.	269	691026	Wire-Control (Cut To Required Length)			
209	692070	Spring-Governor (Red)	270	691027	Nut (Control Wire Casing)			
		----- Note -----	271	691028	Lever-Control			
		692071 Spring-Governor Used on Type No(s). 0034, 0112, 0117, 0118, 0119, 0131, 0133.	273	690681	Seal-O Ring (Oil Pump)			
		690710 Spring-Governor Used on Type No(s). 0113.						
		692072 Spring-Governor Used on Type No(s). 0110, 0120.						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095A.

356700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	692056	Screw (Blower Housing) (14mm)	439	★692154	Seal-O Ring (Crankcase Cover/Sump)	526A	690717	Screw (Regulator)
305A	692062	Screw (Blower Housing)	445	394018	Filter-Air Cleaner Cartridge (Round)	526B	691547	Screw (Regulator) Used on Type No(s). 0110.
309	691564	Motor-Starter	455	841794S	Cup-Flywheel	527	690423	Clamp-Tube
309A		Motor-Starter (For Replacement Starter Motor, Order Reference 309)	456	691529	Plate-Pawl Friction	529	690744	Grommet
309E	808726	Motor-Starter Used on Type No(s). 0112.	459	808166	Pawl-Ratchet	544A	693548	Armature-Starter
310	496880	Screw (Starter Motor)	466	806466	Seal-O Ring (Breather Assembly)	552	690701	Bushing-Governor Crank
310A	690323	Screw (Starter Motor)	467	691985	Knob-Air Cleaner	552A	806686	Bushing-Governor Crank
311A	497608	Brush Set	474A	696578	Alternator (DC Only) Used on Type No(s). 0117, 0120, 0121.	562	690239	Bolt (Governor Control Lever)
332	690887	Nut (Flywheel)	474C	696457	Alternator (Tri-Circuit) Used on Type No(s). 0046, 0132.	563	841735	Screw (Debris Screen Guard)
333	492341	Armature-Magneto	474D	696458	Alternator (10-16 Amp Regulated)	565	690682	Stud (Oil Filter Adapter)
334	692066	Screw (Magneto Armature)	474E	696579	Alternator (20 Amp) Used on Type No(s). 0110.	572	690686	Baffle-Breather
337	491055S	Plug-Spark ----- Note ----- 792015 Plug-Spark Used on Type No(s). 0034, 0046, 0118, 0121, 0130, 0133, 1137.	501	691185	Regulator (3 Wire)(16 Amp) ----- Note ----- 808877 Regulator Used on Type No(s). 0112.	573	841310	Plate-Back ----- Note ----- 693045 Plate-Back Used on Type No(s). 0112.
355	842122	Washer (Muffler Bracket)	501A	691188	Regulator Used on Type No(s). 0046, 0132.	578A	692319	Wire Assembly (With Diodes)
356	807063	Wire-Stop Used on Type No(s). 0113, 0119.	501B	691573	Regulator (3 Wire)(20 Amp) Used on Type No(s). 0110.	596	691492	Screw (Oil Pump)
357	691483	Key-Drive Pulley	505	690238	Nut (Governor Control Lever)	597	690876	Screw (Pawl Friction Plate)
358	808389	Gasket Set-Engine	506	807120	Screw (Carburetor Cover)	600	841016	Spacer-Air Cleaner
359	691077	Washer (Ground Terminal)	507	691972	Insulator	601	691638	Clamp-Hose (Yellow)
363	19203	Puller-Flywheel	510	496881	Drive-Starter	601A	841859	Clamp-Hose (Carburetor Cover/Reservior)
373A	691612	Nut (Ground Terminal)	515	691528	Spring-Pawl	601B	691038	Clamp-Hose (Black)
377	808095	Key-Woodruff	520	691084	Terminal-Ground (Brass)	608	841729	Starter-Rewind Used on Type No(s). 0116.
383	19374S	Wrench-Spark Plug	523	692101	Dipstick	613	691902	Screw (Muffler)
385	807084	Screw (Fuel Pump)	524	692053	Seal- Dipstick Tube	613A	690297	Screw (Muffler)
387	808656	Pump-Fuel	525A	692093	Tube-Dipstick	614	691550	Pin-Cotter
388	820799	Lever-Pinion Drive	526	692067	Screw (Regulator)	616	806685	Crank-Governor
413	693587	Nut (Starter Motor)				628A	806660	Screw (Fuel Pump Bracket)
415	690283	Plug (Square Head)						
436B	691502	Manifold-Exhaust						
436F	805609	Manifold-Exhaust						
437	691902	Screw (Exhaust Manifold)						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095A.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
633	◆●690738	Seal-Choke/Throttle Shaft	741	691530	Gear-Timing	868	★△691963	Seal-Valve
635	692076	Boot-Spark Plug	742	●805578	Retainer-E Ring	871	692057	Bushing-Valve Guide
637	●690735	Washer (Throttle Shaft)	748	692083	Screw (Control Rod Clip)	877A	393814	Wire/Connector-Alternator
638A	691551	Washer (Cylinder Head Cover) (Used Before Code Date 03110100).	773	690875	Retainer	877C	399916	Wire/Connector-Alternator
643	692079	Retainer-Air Filter	788	691559	Bracket-Fuel Pump	877D	698092	Wire/Connector-Alternator
654	690939	Nut (Carburetor)	789	698332	Harness-Wiring (Used on Type No(s). 0113.	878A	691955	Harness-Alternator
668B	●690737	Spacer	797	693167	Nut (Brush Retainer)	878B	691362	Harness-Alternator (Used on Type No(s). 0110.
676	393761	Deflector-Muffler	797A	691029	Nut (Brush Retainer)	879A	841857	Cover-Carburetor (Used After Code Date 04101700). (Includes Reservoir)
677	690661	Screw (Muffler Deflector)	801	808778	Cap-Drive			----- Note -----
678	841730	Spacer-Rewind (Used on Type No(s). 0116.	802	496813	Cap-End			807118 Cover-Carburetor (Used Before Code Date 04101800).
683	820813	Nut (Starter Solenoid)	802A	691286	Cap-End	882	692074	Flange-Exhaust
		----- Note -----	803	690854	Housing-Starter	883A	★△691613	Gasket-Exhaust
		691029 Nut (Starter Solenoid)	807	●690733	Spacer-Throttle	884A	691956	Clamp-Muffler
		Used on Type No(s). 0113.	812	△692055	Nut (Rocker Cover)	893	820805	Nut (Starter Solenoid)
683A	820809	Nut (Starter Solenoid)	816	690706	Washer (Oil Filter Adapter)	899	820811	Washer (Starter Solenoid)
691	★690680	Seal-Governor Shaft	819A	690297	Screw (Muffler Bracket)	914	807084	Screw (Rocker Cover)
697	692062	Screw (Drive Cap)	819C	692537	Screw (Muffler Bracket)	918	393815	Hose-Vacuum (Cut To Required Length)
711A	807084	Screw (Carburetor Shield)	830	809157	Stud-Rocker Arm	920B	825418	Solenoid-Starter
711B	807163	Screw (Carburetor Shield)	833	841233	Screw (Air Cleaner Mounting Strap/Stud)	930	841490	Guard-Rewind
718	806469	Pin-Locating	842	691870	Seal-O Ring (Dipstick Tube)	934	691058	Screw (Fan Retainer)
722	820801	Seal-Plunger	851	493880S	Terminal-Spark Plug	947	806472	Solenoid-Fuel
725	806102	Shield-Heat	717	692542	Bracket-Air Cleaner	955A	691511	Plug-Carburetor
727	841313	Cover-Starter Drive (Black)			----- Note -----	967	272490S	Filter-Pre Cleaner (Round)
728	690297	Screw (Heat Shield)			692153 Bracket-Air Cleaner (Used on Type No(s). 0017, 0132			
729	807136	Clip-Wire (Black)(Spring Steel)	863B	806759	Bracket-Muffler			
729B	690586	Clip-Wire (Snap In)(Nylon)	865	807119	Cover-Air Guide (Black)			
732	690688	Screw (Starter Drive Cover)						
732A	841233	Screw (Starter Drive Cover)						
737	690679	Screw (Oil Filter Adapter)						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095A.

356700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
968	699959	Cover-Air Cleaner (Used With Metal Air Cleaner Base)	1017	690878	Screen-Oil Pump	1037	●807717	Ball-Choke Locator
971A	807084	Screw (Air Cleaner Base to Carburetor)	1022	★△806039	Gasket-Rocker Cover	1051	●690736	Ring-Retaining
975	807715	Bowl-Float	1023	808648	Cover-Rocker	1051A	691124	Ring-Retaining
977	808325	Gasket Set-Carburetor	1023A	691558	Cover-Rocker (Cylinder 1) (With Fuel Pump)	1054	280275	Tie-Cable
987	◆●691548	Seal-Throttle Shaft	1023B	691494	Cover-Rocker	1058	277107	Operator's Manual
988	★692063	Gasket-Oil Adapter	1024	693186	Pump-Oil	1090	691293	Retainer-Brush
996	691577	Shield-Carburetor	1025	690689	Spool-Governor	1091	●691515	Cap-Limiter
1004	842258	Duct-Air (Used With Metal Air Cleaner Base)	1026	691836	Rod-Push (Intake)(Steel)	1095A	808391	Gasket Set-Valve
1005	841439	Fan-Flywheel (Used After Code Date 04011800). ----- Note ----- 809179 Fan-Flywheel (Used Before Code Date 04011900).	1027	842921	Filter-Oil	1100	791959	Pivot-Rocker Arm
1006	690452	Retainer-Fan	1028	808235	Adapter-Oil Filter	1119	691552	Screw (Alternator)
1009	806474	Screw (Starter Motor)	1029	807323	Arm-Rocker	1130	690746	Stud (Intake Manifold)
			1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)	1135	806497	Washer (Crankcase Cover/Sump)
						1176	842067	Nut (Exhaust Manifold)
						1254	807084	Screw (Rocker Cover Stud)
						1319	794467	Label-Warning
						1330	272144	Repair Manual
						1392	690939	Nut (Rewind Guard)

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095A.