

385700

Illustrated Parts List

Model Series

385700

AIR COOLED

TYPE NUMBERS



0001, 0003, 0005, 0006, 0007, 0100, 0108, 0110, 0111, 0112, 0114, 0115, 0116, 0117,
0118, 0119, 0123, 0124, 0126, 0128, 0129, 0131, 0133, 0135, 0136, 0137, 0349, 1126,
1127, 1211, 1284, 2211.

Not for
Reproduction



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without
permission
in writing from Briggs & Stratton Corporation

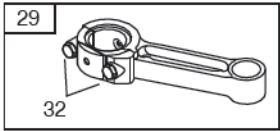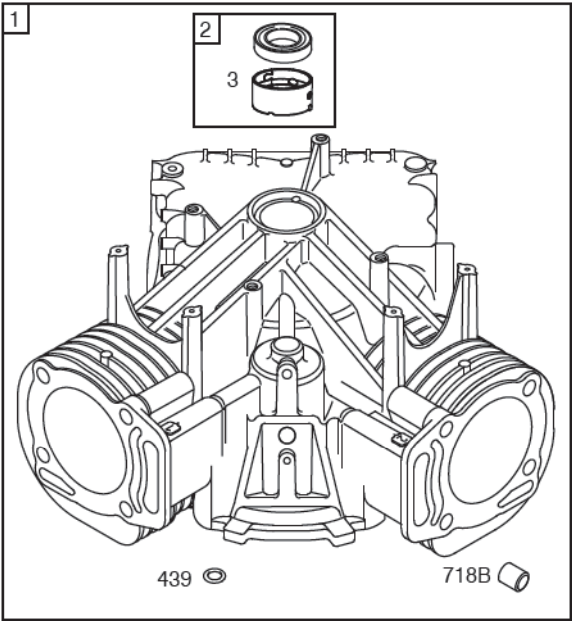

1036 EMISSIONS LABEL

1319 WARNING LABEL

WARNING







Read and follow Operating Instructions before running engine.


Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.


Engines emit carbon monoxide. DO NOT run in enclosed area.


Muffler area temperature may exceed 150°F. Do not touch hot parts.


REQUIRED when replacing parts with warning labels affixed.

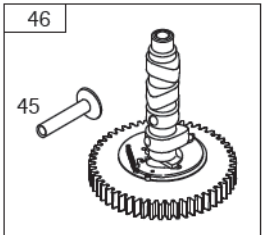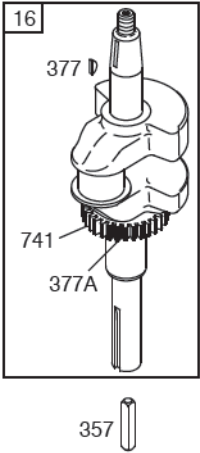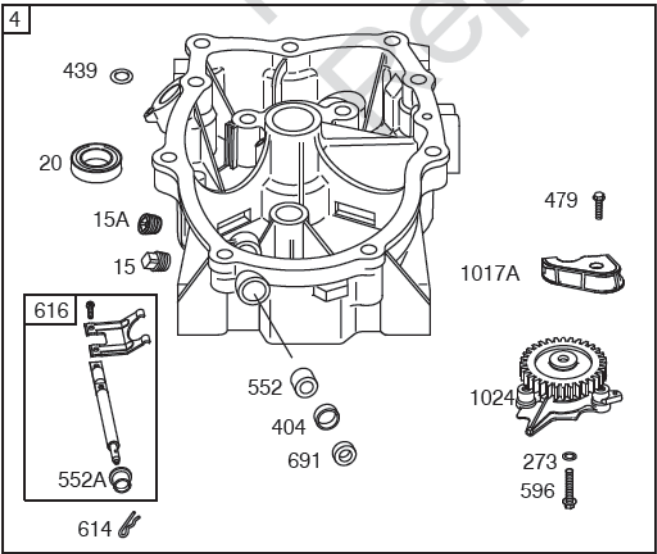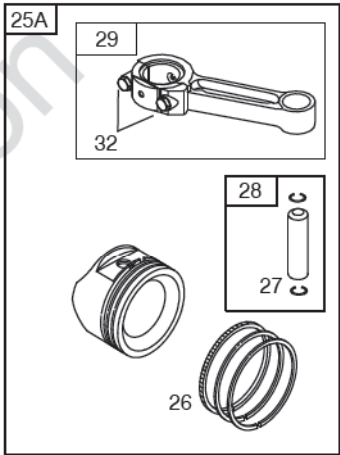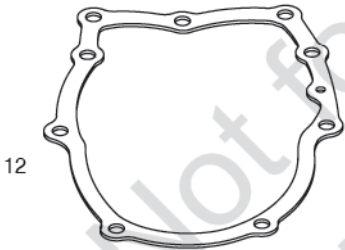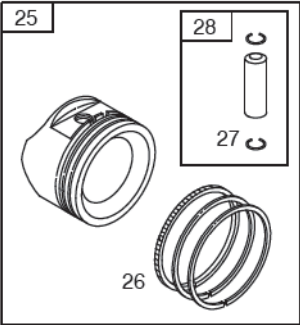


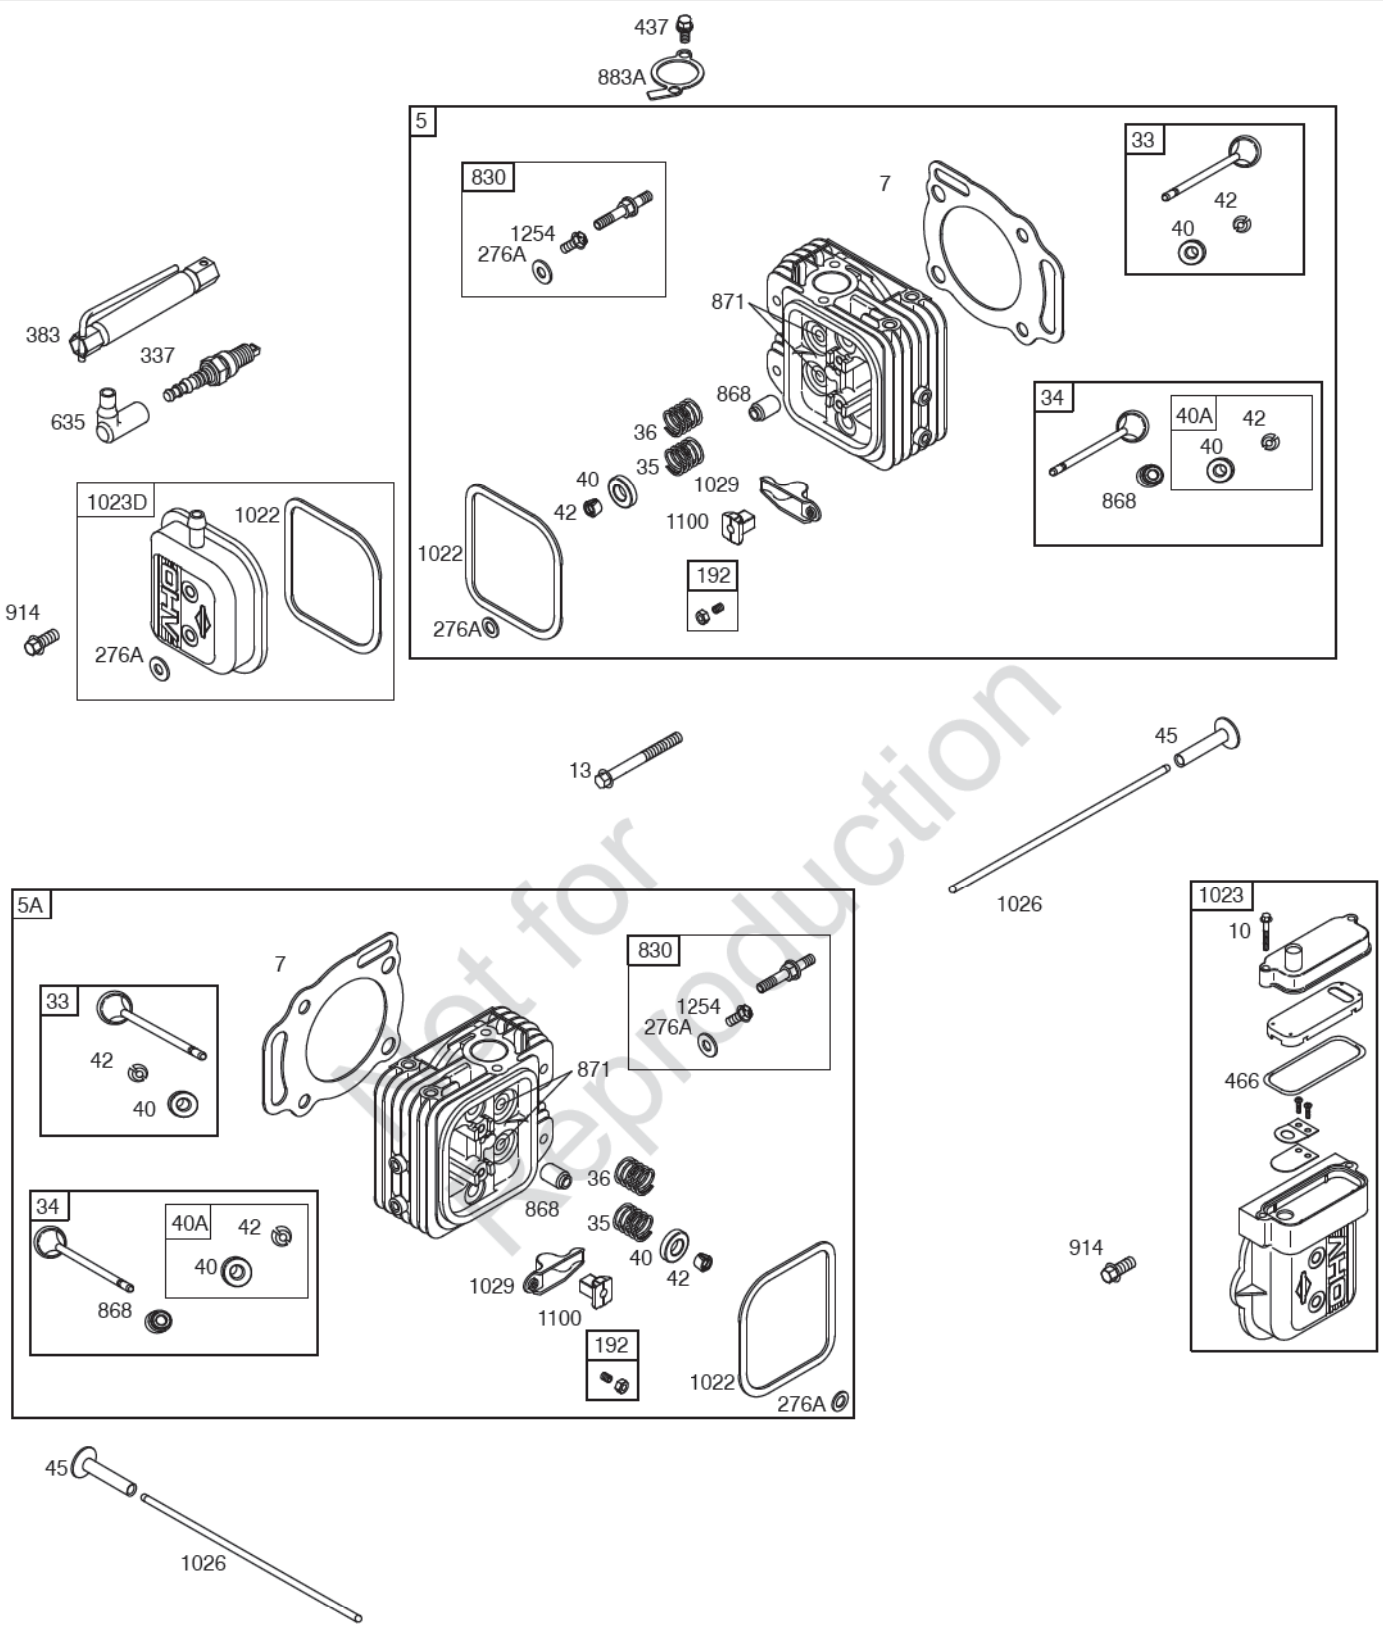














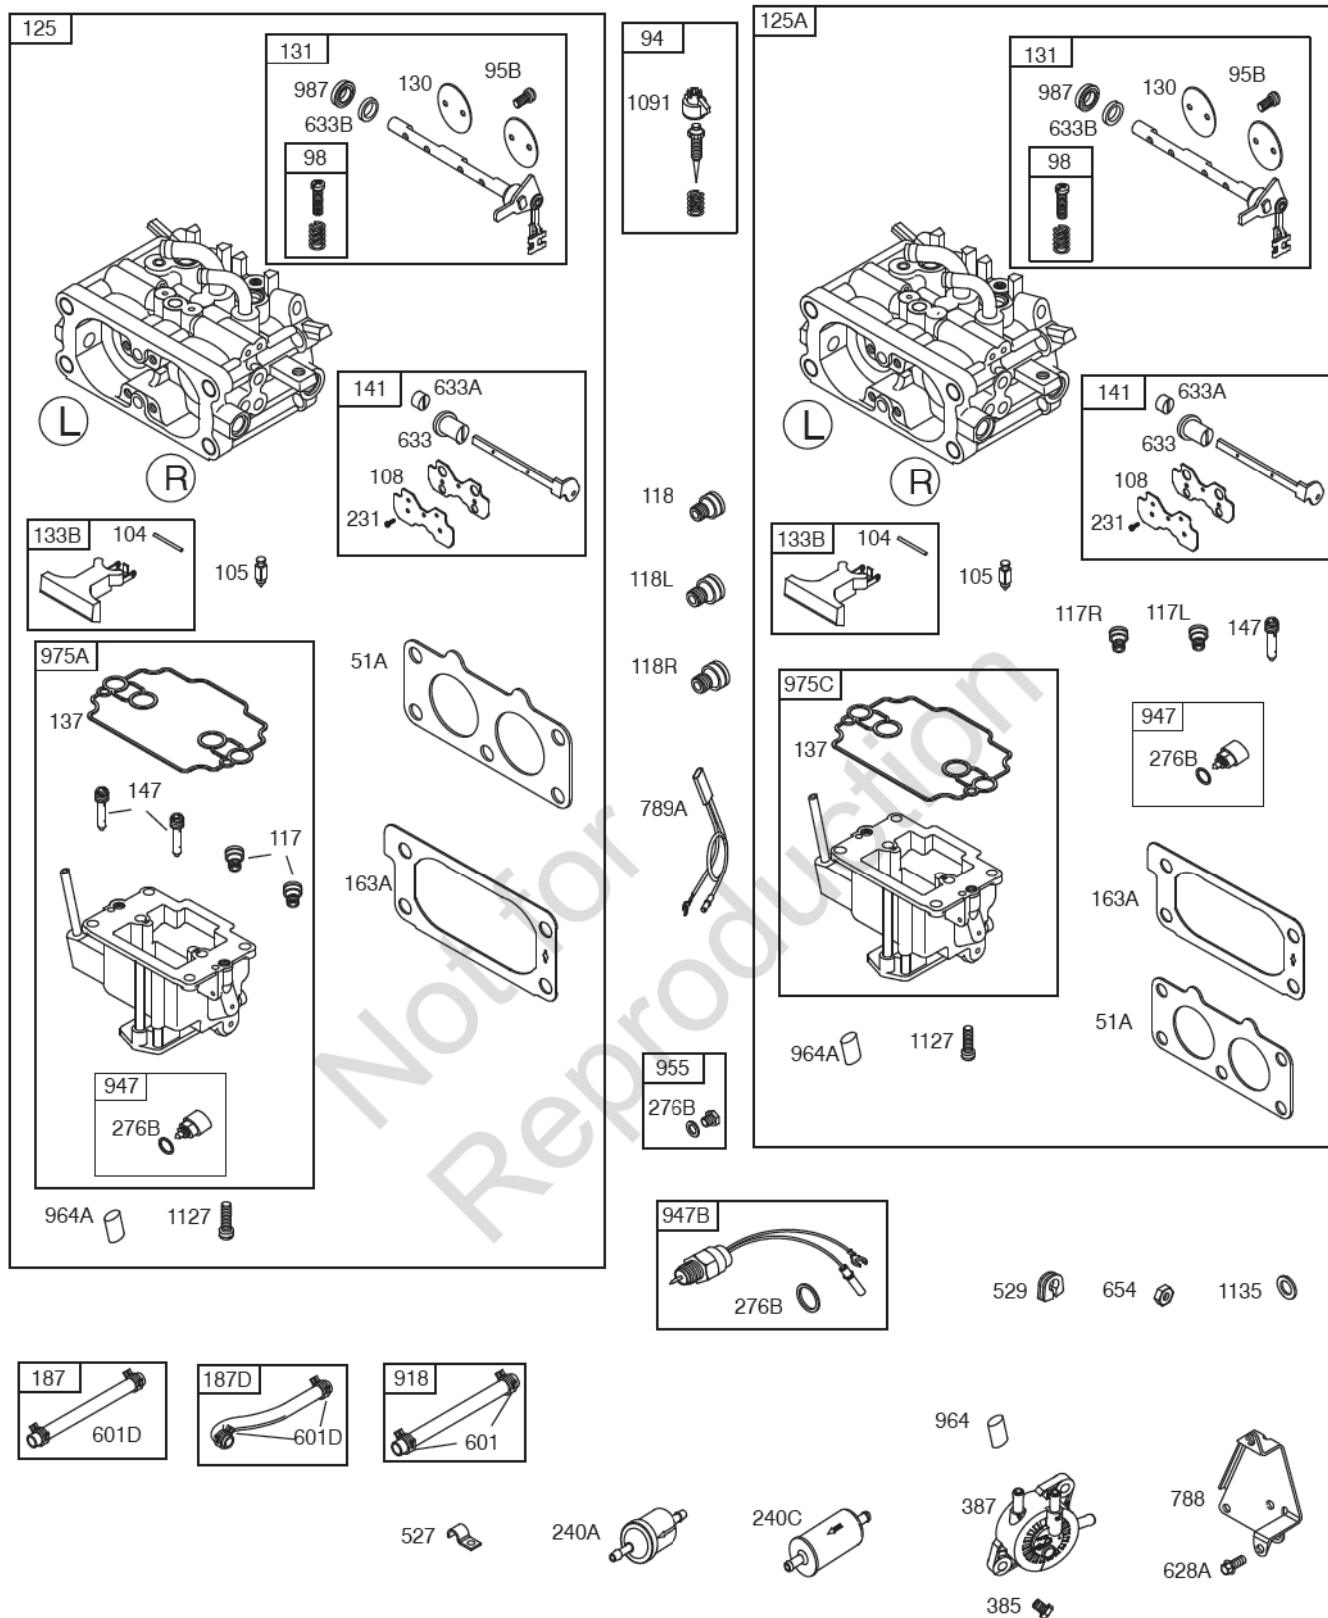


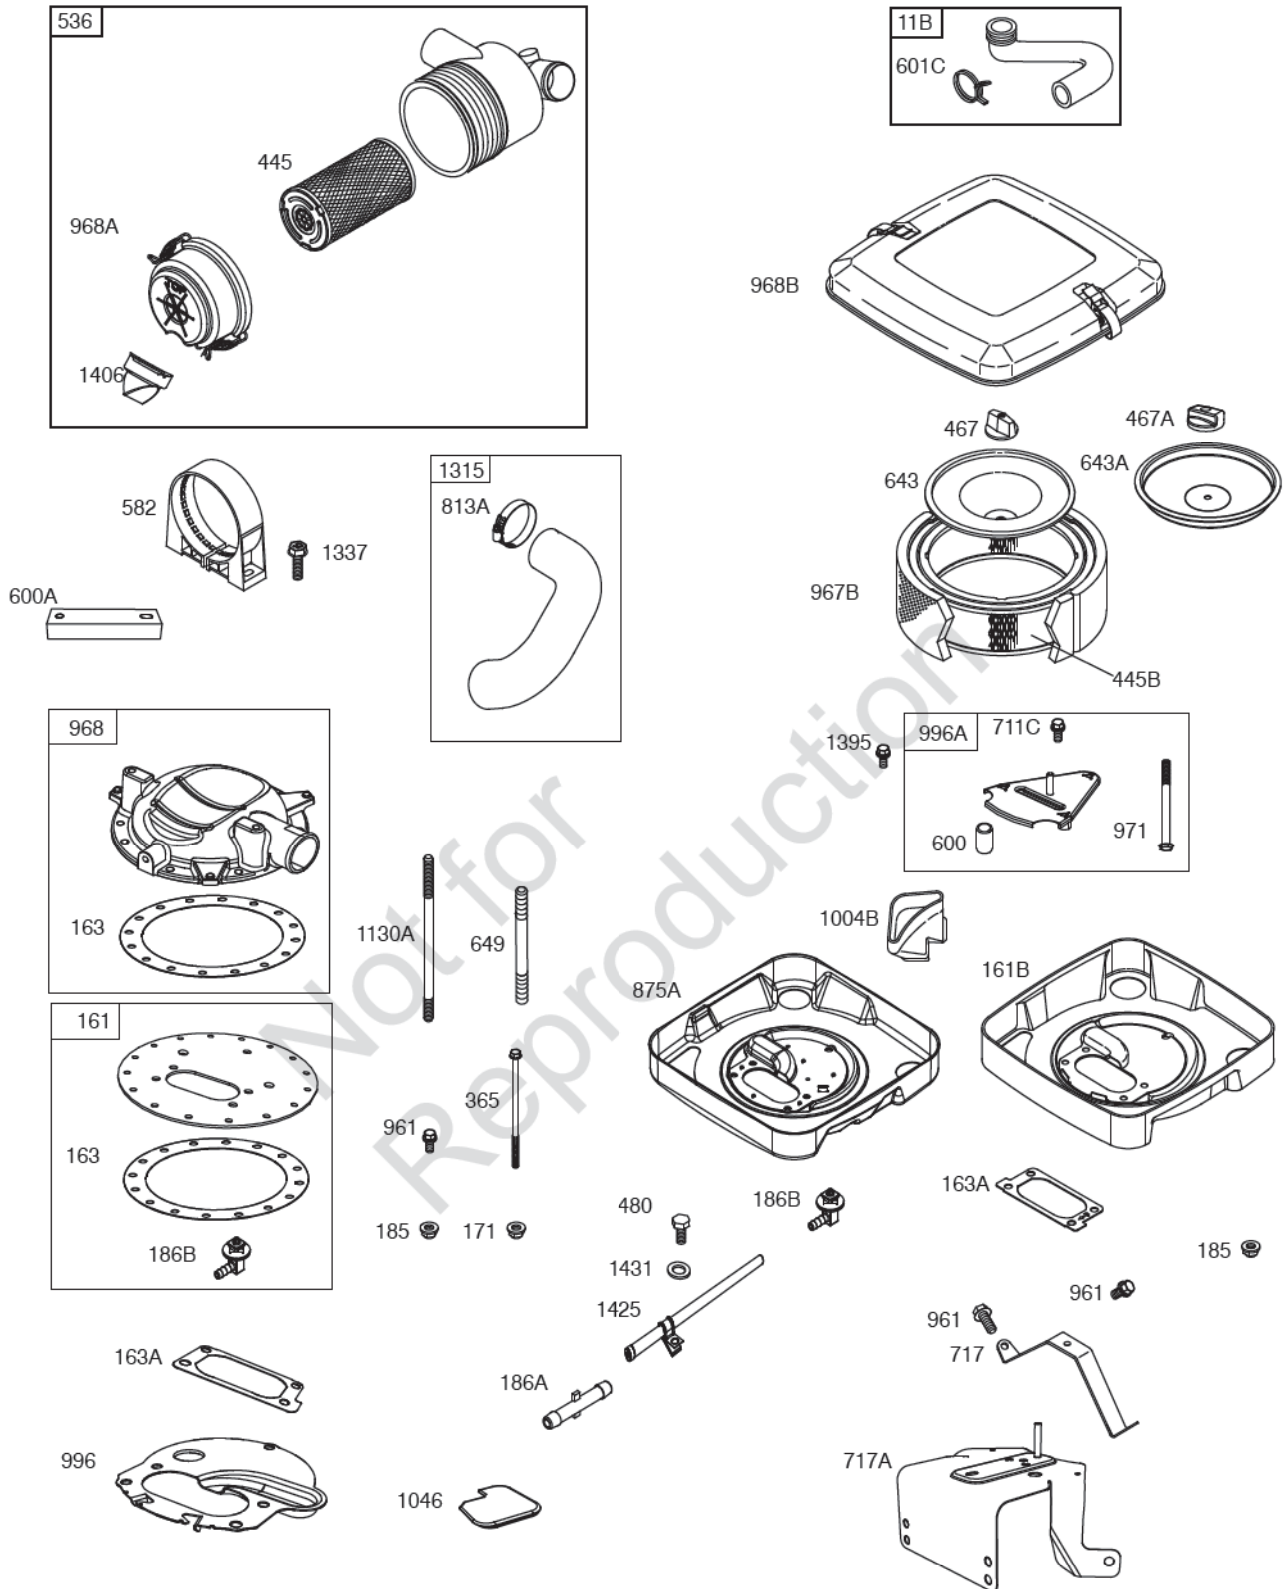




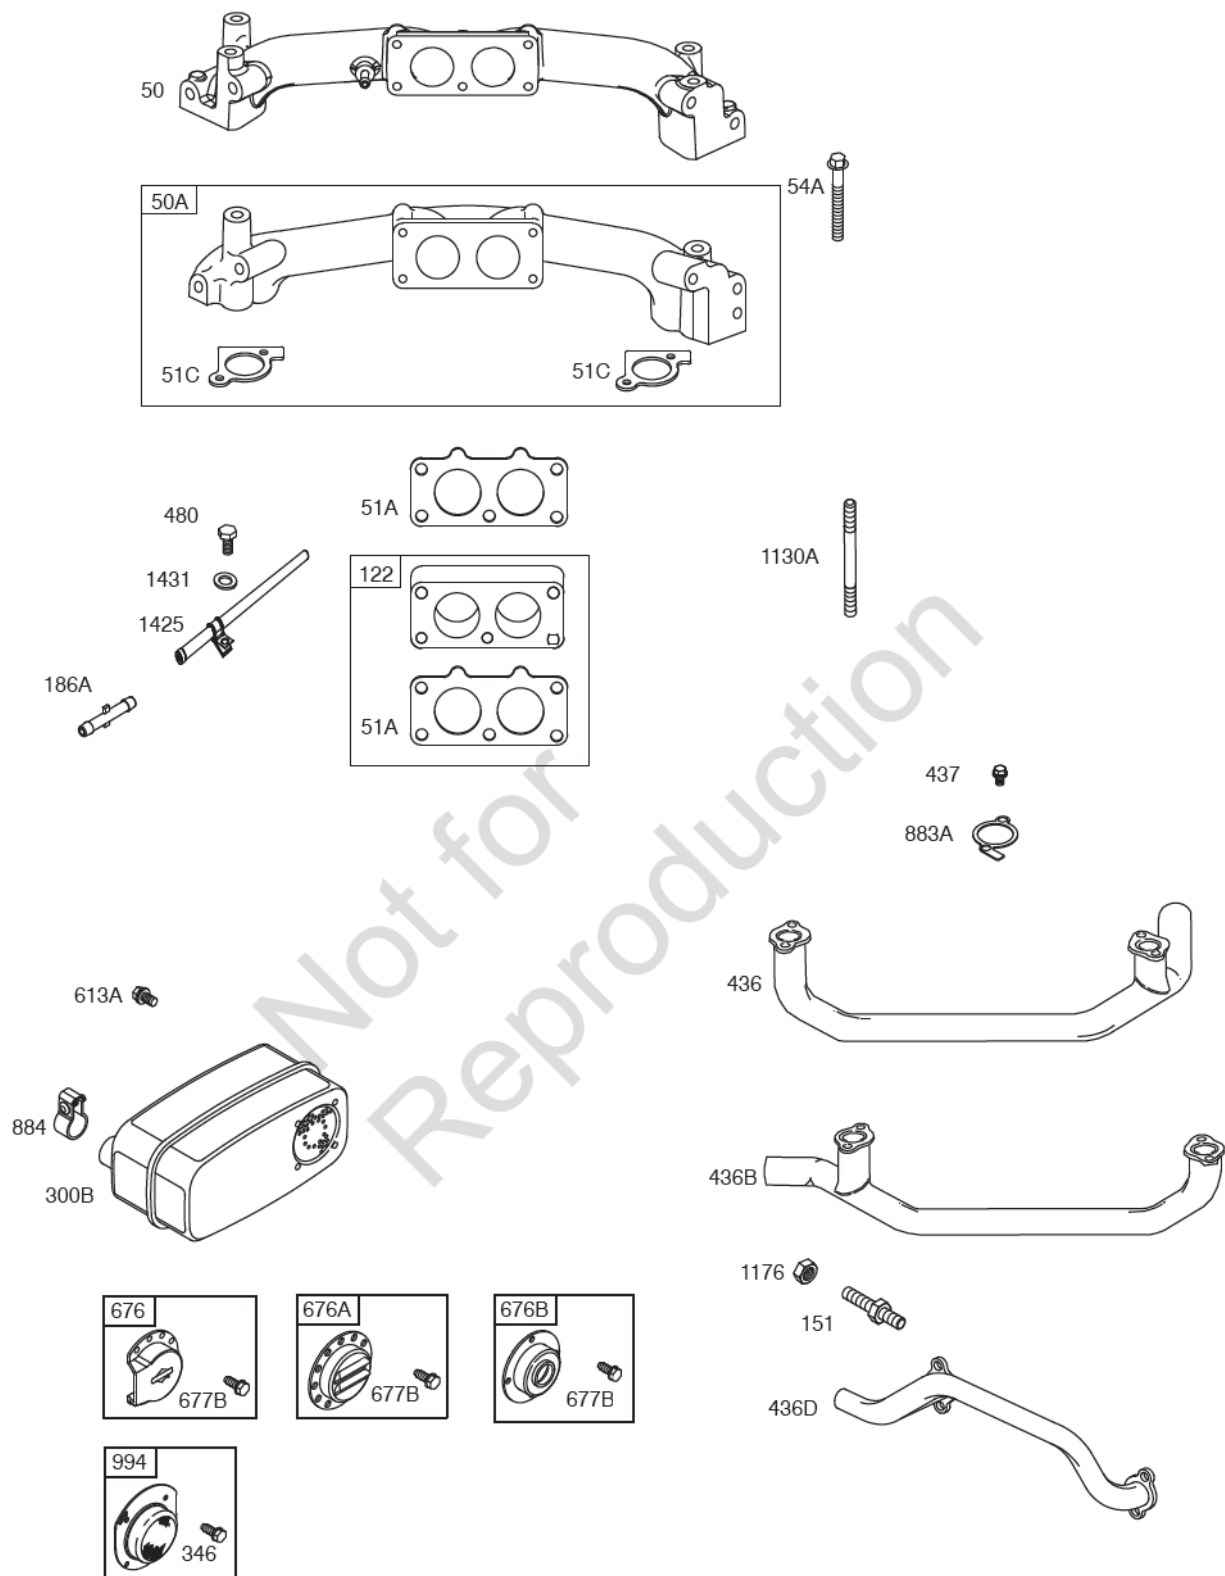


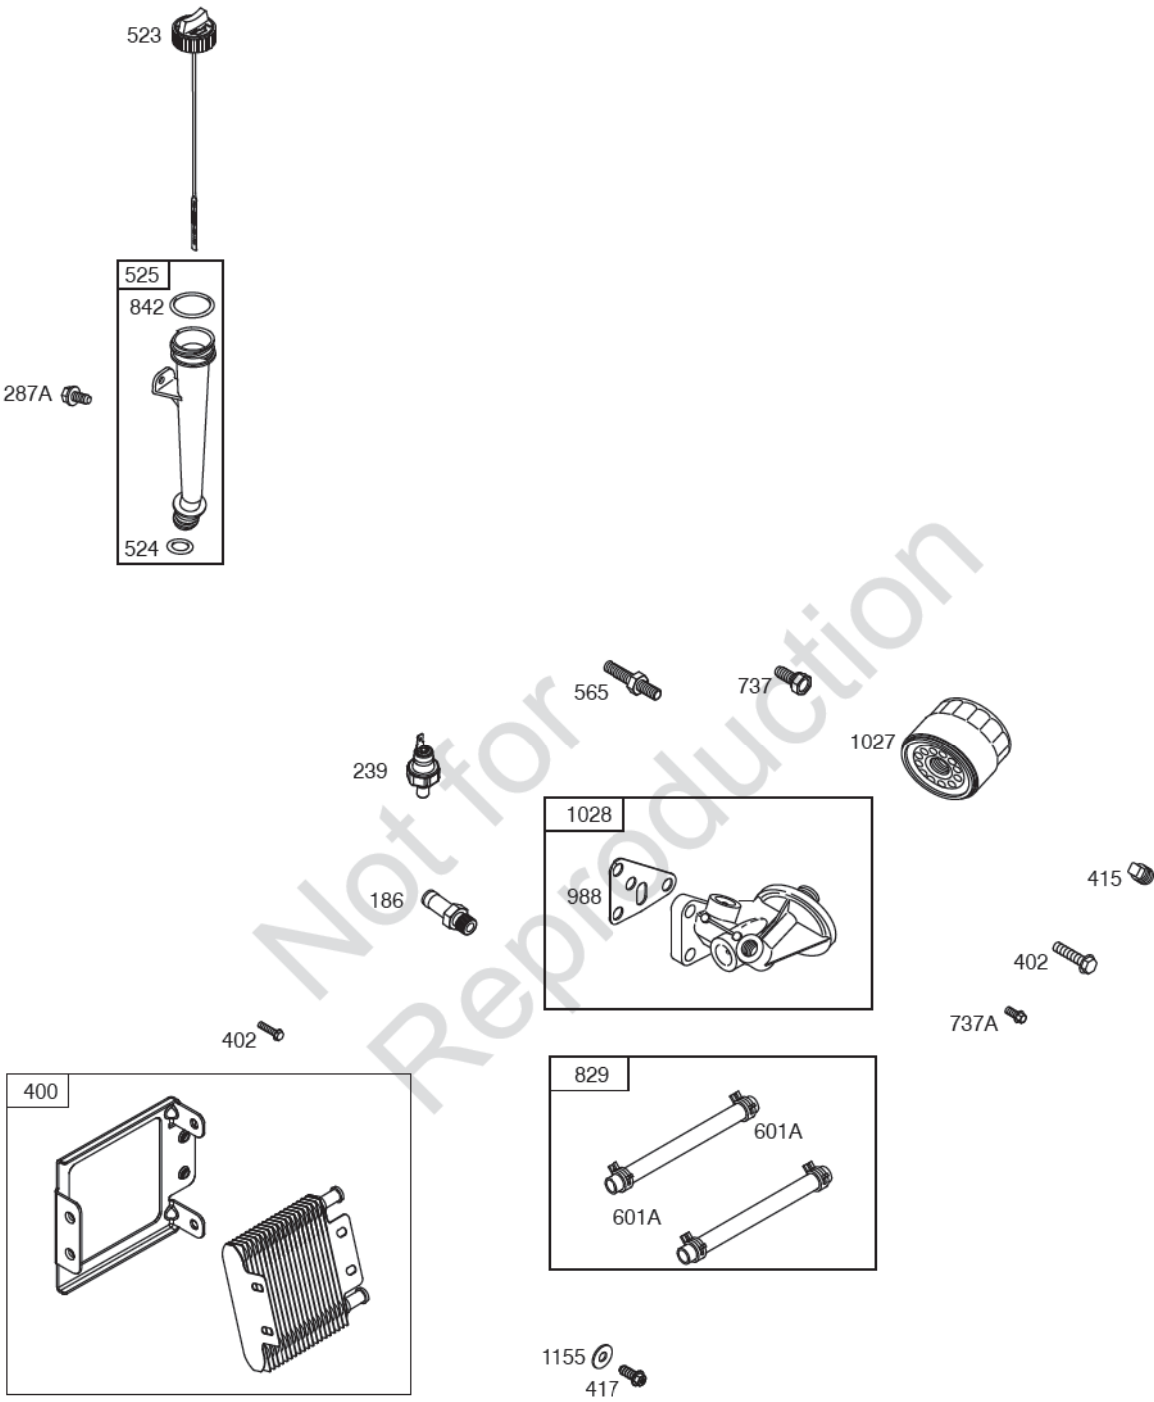

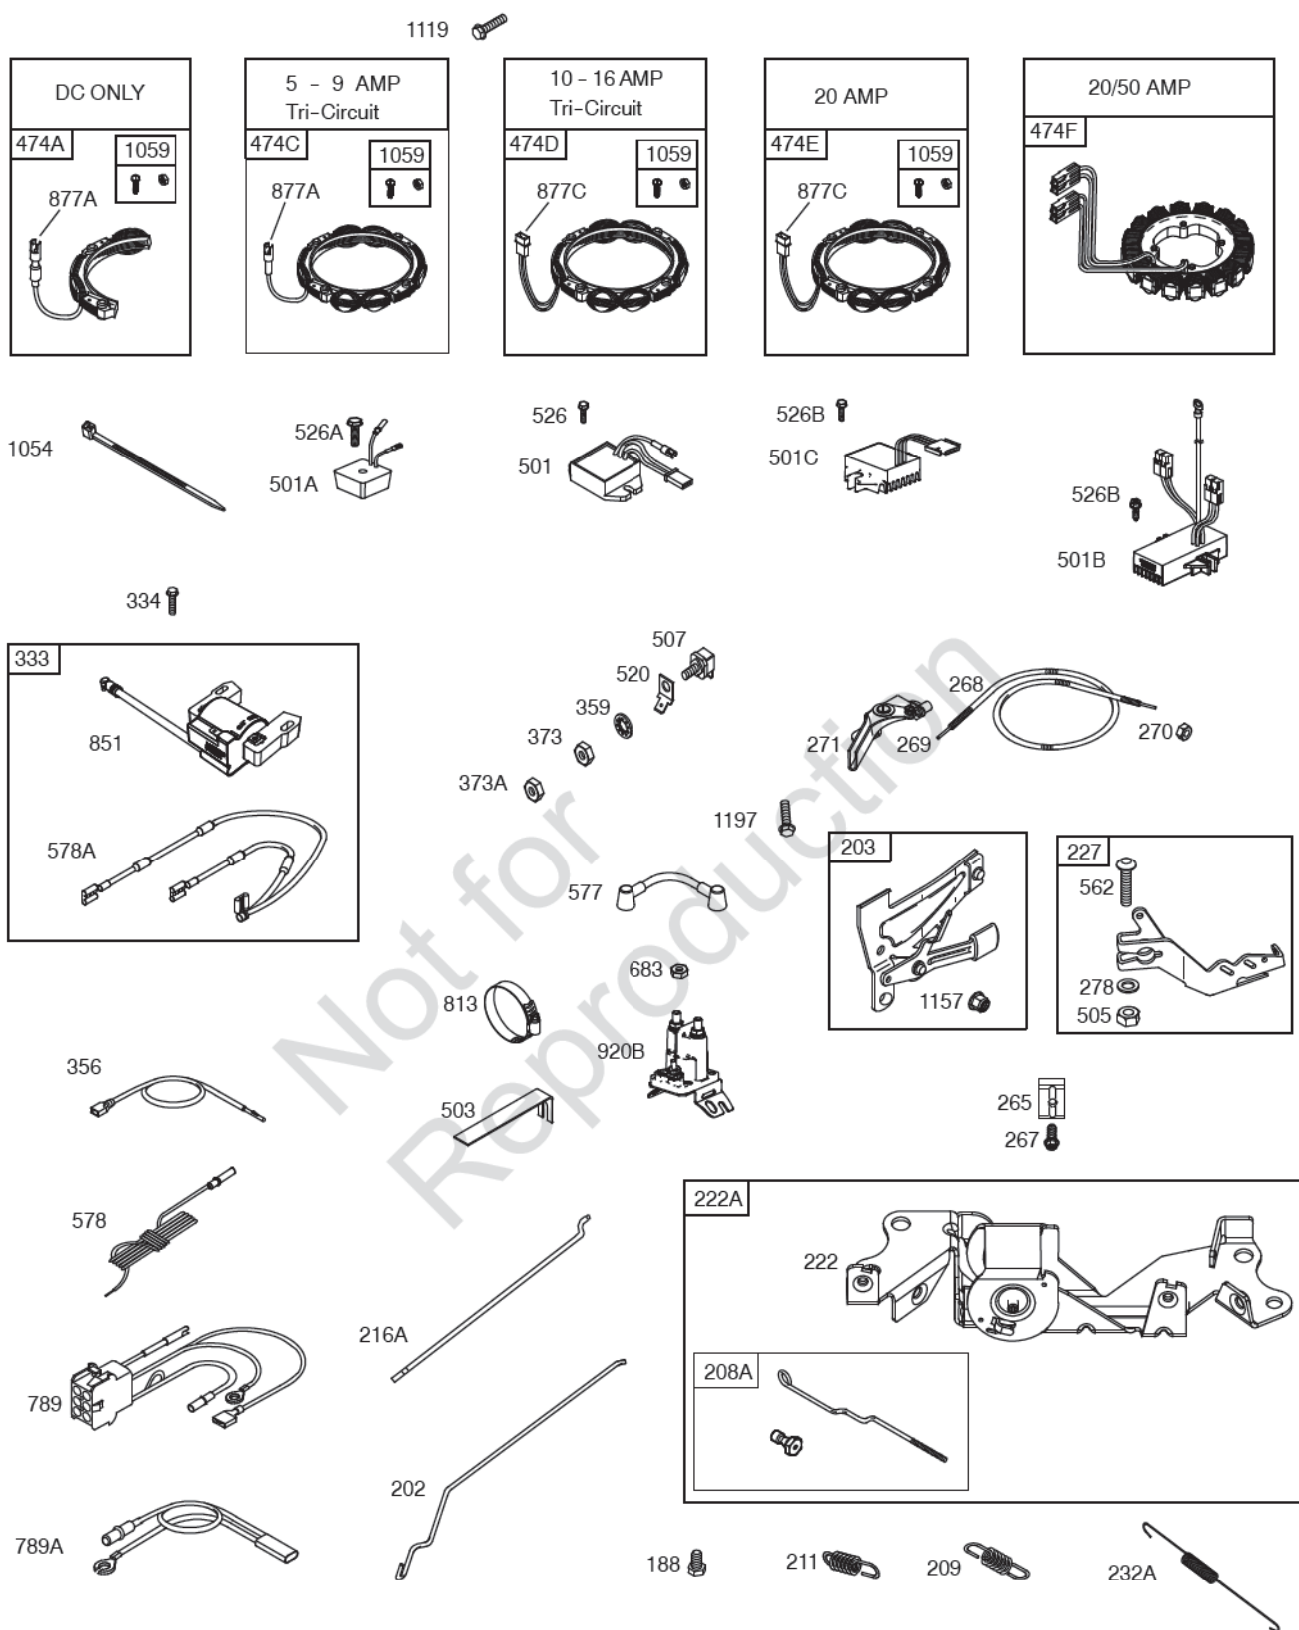

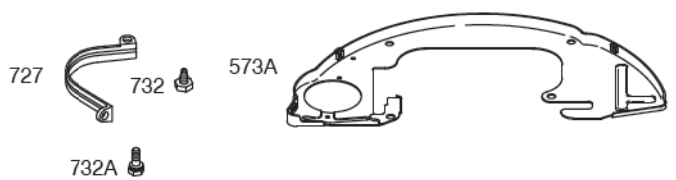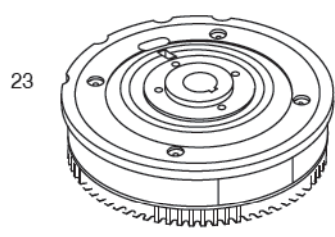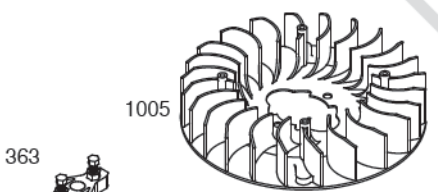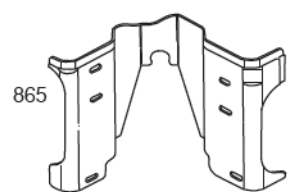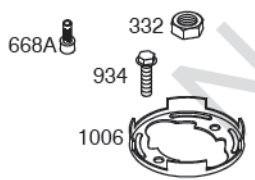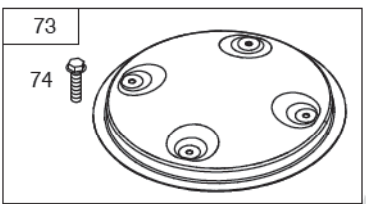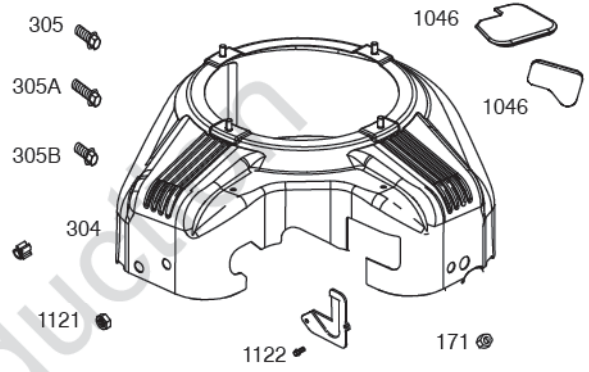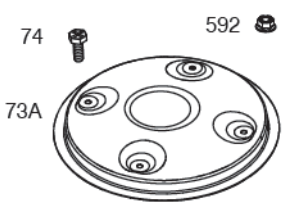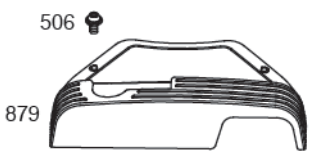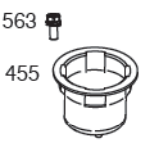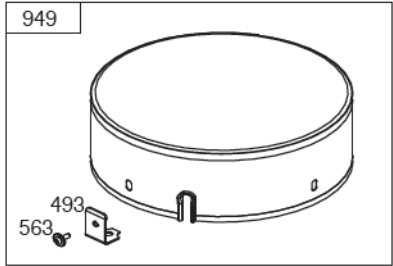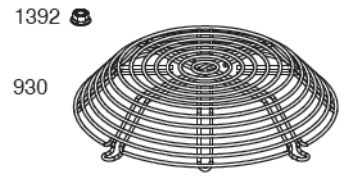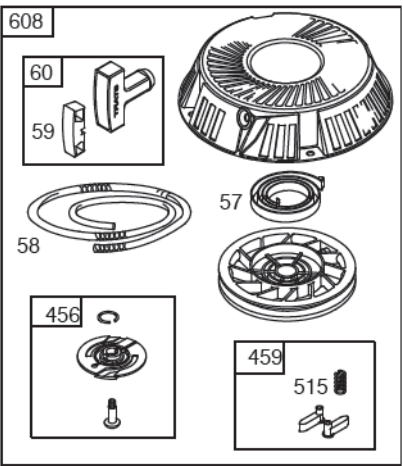

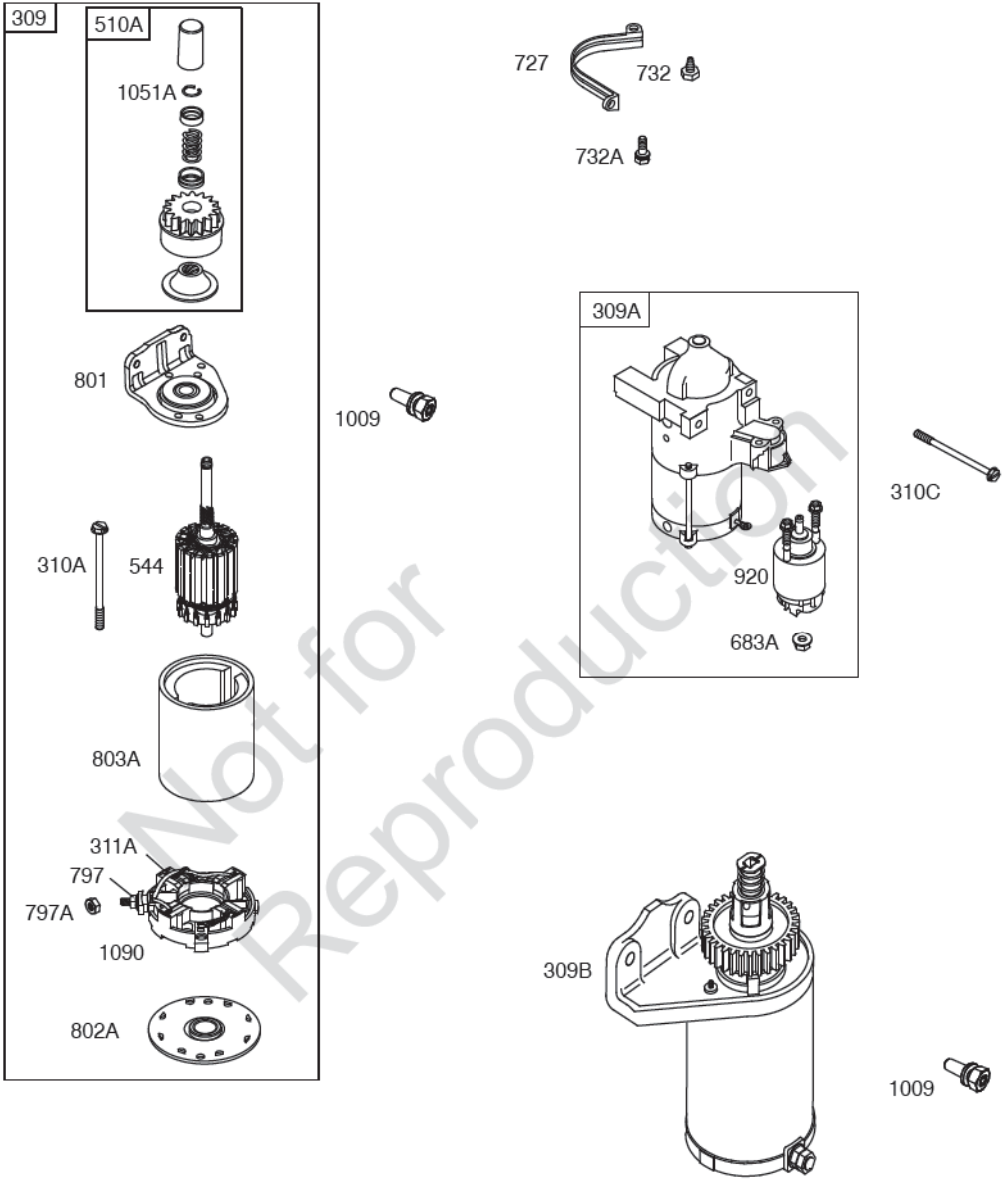

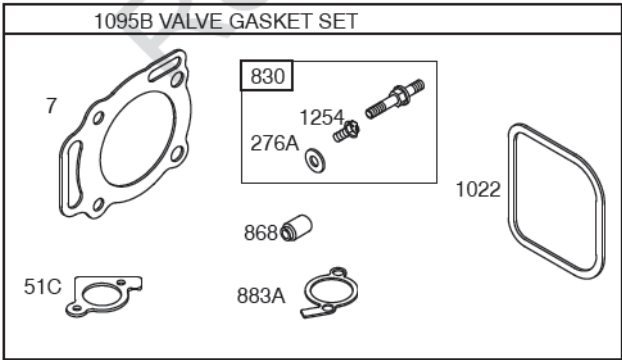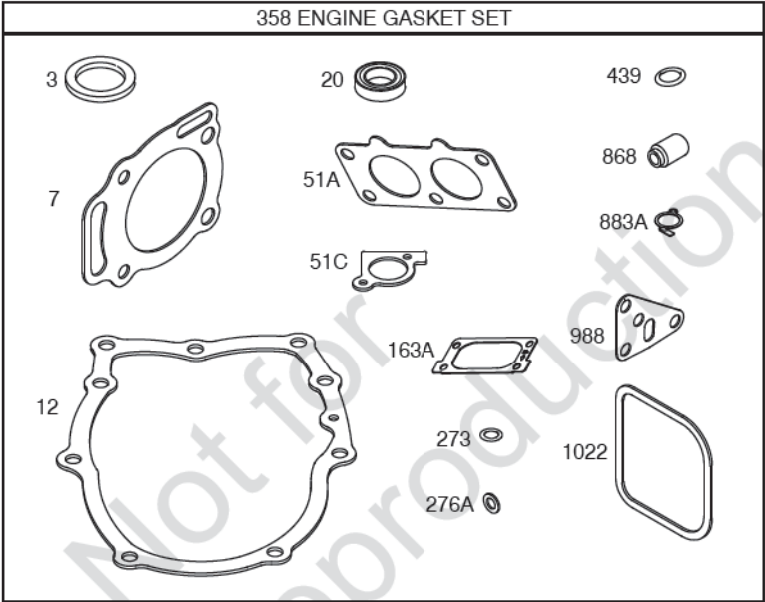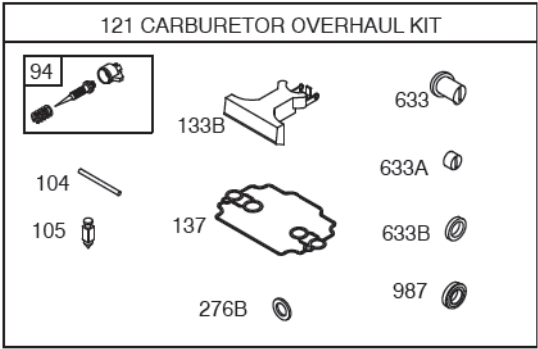

385700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	842648	Cylinder Assembly (Used After Code Date 05073100). ----- Note ----- 808647 Cylinder Assembly (Used Before Code Date 05080100). 845095 Cylinder Assembly Used on Type No(s). 0124, 0126, 1126.	16	843809	Crankshaft (Used After Code Date 07062900). ----- Note ----- 809810 Crankshaft (Used Before Code Date 07063000). 843813 Crankshaft (Used After Code Date 07062900). Used on Type No(s). 0006, 0100, 0111, 0114, 0118, 0124, 0126, 0128, 0137, 1114, 1126 809831 Crankshaft (Used Before Code Date 07063000). Used on Type No(s). 0100, 0111, 0114, 0118, 0124, 0126. 843816 Crankshaft (Used After Code Date 07062900). Used on Type No(s). 0116. 809841 Crankshaft (Used Before Code Date 07063000). Used on Type No(s). 0116.	25	843805	Piston Assembly (Standard) (Used After Code Date 07062900). ----- Note ----- 844877 Piston Assembly (.020" Oversize) (Used After Code Date 07062900).
2	808534	Kit-Bushing/Seal (Magneto Side)				25A	844009	Piston Assembly (Standard) (Used Before Code Date 07063000). 843823 Piston Assembly (.020" Oversize) (Used Before Code Date 07063000).
3	805101s	Seal-Oil (Magneto Side)				26	843806	Ring Set (Standard) ----- Note ----- 843824 Ring Set (.020" Oversize)
4	843954	Sump-Engine				27	690683	Lock-Piston Pin (Used After Code Date 07062900).
5	845713	Head-Cylinder (Cylinder #1)				27A	806378	Lock-Piston Pin (Used Before Code Date 07063000).
5A	845714	Head-Cylinder (Cylinder #2)				28	844023	Pin-Piston (Used After Code Date 07062900).
7	842622	Gasket-Cylinder Head				28A	808526	Pin-Piston (Used Before Code Date 07063000).
10	806421	Screw (Breather Cover)				29	807900s	Rod-Connecting (Standard)
11B	806379	Tube-Breather				32	690698	Screw (Connecting Rod)
12	846487	Gasket-Crankcase ----- Note ----- 845254 Gasket-Crankcase Used on Type No(s). 0006, 0128, 0137	20	805049s	Seal-Oil (PTO Side)			
13	842618	Screw (Cylinder Head) (M8x106mm Long)	22	807362	Screw (Crankcase Cover/Sump)			
15	690946	Plug-Oil Drain (3/8" NPTF External 7/16" Sq)	23	809236	Flywheel ----- Note ----- 841728 Flywheel Used on Type No(s). 0110, 0118, 0123. 842442 Flywheel Used on Type No(s). 0124, 0126, 1126. 841050 Flywheel Used on Type No(s). 0136.			
15A	691680	Plug-Oil Drain (3/8" NPTF Internal 3/8" Sq)						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

5959-12

Assemblies include all parts shown in frames.

06/10/2016

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
33	806419	Valve-Exhaust	117R	809708	Jet-Main (Standard) (Right Jet) Used on Type No(s). 0114, 0124, 0126, 1114, 1126.	163	841823	Gasket-Air Cleaner
34	845712	Valve-Intake (Used After Code Date 12021200). ----- Note ----- 843751 Valve-Intake (Comes w/o #868) (Used Before Code Date 12021300).	118	842153	Jet-Main (High Altitude) (5000 Feet) (Left and Right Jets)	163A	692087	Gasket-Air Cleaner
35	692084	Spring-Valve (Intake)	118L	809723	Jet-Main (5000 Feet) (Left Jet) Used on Type No(s). 0114, 0124, 0126, 1114, 1126.	171	690941	Nut (Air Cleaner) (M8)
36	692084	Spring-Valve (Exhaust)	118R	842449	Jet-Main (5000 Feet) (Right Jet) Used on Type No(s). 0114, 0124, 0126, 1114, 1126.	185	690939	Nut (Air Cleaner Base) (M6)
40	692058	Retainer-Valve	121	843787	Kit-Carburetor Overhaul	186	693184	Connector-Hose
40A	844895	Retainer-Valve	122	690870	Spacer-Carburetor	186A	845121	Connector-Hose
42	807683	Keeper-Valve	125	844371	Carburetor	186B	845141	Connector-Hose
45	843379	Tappet-Valve	125A	842460	Carburetor Used on Type No(s). 0005, 0114, 0124, 0126, 1114, 1126.	187	791766	Line-Fuel (Cut To Required Length) ----- Note -----
46	690927	Camshaft	130	809642	Valve-Throttle	187D	791744	Line-Fuel (Formed) (Cut To Required Length)
50	844504	Manifold-Intake Used on Type No(s). 1284.	131	842068	Kit-Throttle Shaft	188	692056	Screw (Control Bracket)
50A	806376	Manifold-Intake	133B	809637	Float-Carburetor	192	807623	Adjuster-Rocker Arm
51A	690950	Gasket-Intake	137	809645	Gasket-Float Bowl	202	690867	Link-Mechanical Governor
51C	806418	Gasket-Intake (Manifold/Heads)	141	843785	Kit-Choke Shaft	203	808753	Crank-Bell
54A	806444	Screw (Intake Manifold)	146	691639	Key-Timing	208A	808453	Rod-Governor Control
57	692086	Spring-Rewind Starter	147	845727	Jet-Pilot ----- Note -----	209	692071	Spring-Governor (White) ----- Note -----
58	66574	Rope-Starter			841920 Jet-Pilot Used on Type No(s). 0114, 0124, 0126, 1114, 1126.			692070 Spring-Governor (Red) Used on Type No(s). 0003, 0005, 0100, 0108, 0112, 0115, 0116, 0123, 0136.
59	805957	Insert-Grip	151	841185	Stud (Exhaust Manifold)			690710 Spring-Governor (Silver) Used on Type No(s). 0111, 0114, 0119, 0124, 0131, 1113, 1114, 1119.
60	808167	Grip-Starter Rope	161	843563	Base-Air Cleaner Used on Type No(s). 0114, 0124, 0126, 1126.	211	692069	Spring-Governed Idle
65	690341	Screw (Rewind Starter) (5/16-18, x 0.875)	161B	808676	Base-Air Cleaner Used on Type No(s). 0001, 0006, 0007, 0131, 1113, 1119, 2211.	215	841183	Guide-Air (Cylinder #2)
73	841440	Screen-Rotating				215A	841182	Guide-Air (Cylinder #1)
73A	841662	Screen-Rotating						
74	841441	Screw (Rotating Screen)						
94	842883	Kit-Idle Mixture						
95B	690718	Screw (Throttle Valve)						
98	809716	Kit-Idle Speed						
104	690739	Pin-Float Hinge						
105	809759	Valve-Float Needle						
108	809643	Valve-Choke						
117	809635	Jet-Main (Standard) (Left and Right Jets)						
117L	842449	Jet-Main (Standard) (Left Jet) Used on Type No(s). 0114, 0124, 0126, 1114, 1126.						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

5959-13

Assemblies include all parts shown in frames.

06/10/2016

385700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
216A	690871	Link-Choke	300B	498984s	Muffler	363	19203	Puller-Flywheel
222	845305	Bracket-Control			Used on Type No(s).	365	690866	Screw
222A	808454	Bracket-Control			0108, 0110, 0123,			(Carburetor)
227	690236	Lever-Governor			0129, 0135.			(M6x85mm Long)
		Control	304	841489	Housing-Blower	373	845823	Nut
231	690718	Screw	305	692056	Screw			(#8-32)
		(Choke Valve)			(Blower Housing)	373A	691612	Nut
232A	690874	Spring-Governor Link			(14mm Long)			(#8-32 KEPS)
239	690233	Switch-Oil Pressure	305A	692062	Screw	377	808095	Key-Woodruff
		Used on Type No(s).			(Blower Housing)	377A	691639	Key-Woodruff
		0001, 0006, 0117,			(18mm Long)	383	19576s	Wrench-Spark Plug
		0118, 0119, 0124,	305B	841233	Screw	385	807084	Screw
		0126, 0128, 0129,			(Blower Housing)			(Fuel Pump)
		0131, 0133, 0135,			(12 mm Long)	387	808656	Pump-Fuel
		1113, 1119, 1126.	309	846451	Motor-Starter	400	808657	Cooler-Oil
		----- Note -----			(Used Before Code	402	690679	Screw
		697049 Switch-Oil			Date (11011500).			(Oil Filter Cover)
		Pressure			(Steel Ring Gear Only)	404	690704	Washer-Sealing
		Used on Type No(s).	309B	844717	Motor-Starter			(Governor Crank)
		0111, 0112, 0114,			(Used After Code Date	415	794903	Plug
		1114.			(11011400).			(1/8-27 NPTF)
		841281 Switch-Oil	309A	845759	Motor-Starter	417	843345	Screw
		Pressure			Used on Type No(s).			(Oil Cooler)
		Used on Type No(s).			0124, 0126, 1126.	436	808916	Manifold-Exhaust
		0137.	310A	690323	Screw			Used on Type No(s).
240A	691035	Filter-Fuel			(Starter Motor)			0108.
240C	845125	Filter-Fuel			(#10-24x4 7/16")	436B	808909	Manifold-Exhaust
265	691024	Clamp-Casing	310C	806474	Screw			Used on Type No(s).
267	692083	Screw			(Starter Motor)			0006, 0110, 0118,
		(Casing Clamp)			(M8x98mm)			0128, 0129, 0135.
		(M5x12mm SEMS)	311A	497608	Brush Set	436D	808908	Manifold-Exhaust
		----- Note -----	332	690887	Nut			Used on Type No(s).
		841552 Screw			(Flywheel)			0123.
		(M5x20mm SEMS)	333	845606	Armature-Magneto	437	691902	Screw
		592577 Screw	334	692066	Screw			(Exhaust Manifold)
		(#10-32x.62")			(Magneto Armature)	439	692154	Seal-O Ring
268	691025	Casing-Control Wire	337	491055s	Plug-Spark			(Crankcase
		(Cut To			----- Note -----			Cover/Sump)
		required Length)			792015 Plug-Spark	445	820263	Filter-Air Cleaner
269	691026	Wire-Control			Used on Type No(s).			Cartridge
		(Cut To			0003, 0005, 0006,	445B	692519	Filter-Air Cleaner
		Required Length)			0007, 0110, 0117,			Cartridge
270	691027	Nut			0118, 0128, 0129,	455	841794	Cup-Flywheel
		(Control Wire Casing)			0133, 0135, 0137,	456	845219	Plate-Pawl Friction
271	691028	Lever-Control			1127.	459	845218	Pawl-Ratchet
273	690681	Seal-O Ring	346	690661	Screw	466	806466	Seal-O Ring
		(Oil Pump)			(Spark Arrestor)			(Breather Assembly)
276A	807085	Washer-Sealing			(#8-18 x .375" Type B)	467	691985	Knob-Air Cleaner
		(Rocker Cover)	356	807063	Wire-Stop	467A	844618	Knob-Air Cleaner
276B	806476	Washer-Sealing	357	691483	Key-Drive Pulley	474A	592828	Alternator
		(Fuel Solenoid)	358	842658	Gasket Set-Engine			(DC Only)
278	842122	Washer	359	691077	Washer			Used on Type No(s).
		(Governor			(Ground Terminal)			0110, 0118, 0123.
		Control Lever)						
287A	807084	Screw						
		(Dipstick Tube)						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

5959-14

Assemblies include all parts shown in frames.

06/10/2016

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
474C	592829	Alternator (5/9 Amp Tri-Circuit) Used on Type No(s). 0006, 0128, 0129, 0137.	515	691528	Spring-Pawl	596	691492	Screw (Oil Pump)
			520	691084	Terminal-Ground	600	845213	Spacer-Air Cleaner
			523	692101	Dipstick	600A	843564	Spacer-Air Cleaner
			524	692053	Seal-Dipstick Tube	601	691038	Clamp-Hose (Black)
474D	592830	Alternator (10/16 Amp Tri-Circuit) Used on Type No(s). 0001, 0003, 0005, 0007, 0100, 0108, 0111, 0112, 0114, 0115, 0116, 0117, 0119, 0131, 0133, 0135, 0349, 1113, 1114, 1119, 1127, 1211, 1284, 2211.	525	692093	Tube-Dipstick	601A	841597	Clamp-Hose (Oil Hose)
			526	692067	Screw (Regulator) (M6x12mm Long)	601C	691145	Clamp-Hose (Silver)
			526A	690717	Screw (Regulator) (M6x30mm Long)	601D	791850	Clamp-Hose
			526B	691547	Screw (Regulator) (M6x28mm Long)	608	841729	Starter-Rewind
			527	690423	Clamp-Tube	613A	690297	Screw (Muffler)
474E	696578	Alternator (20 Amp) Used on Type No(s). 0136.	529	690744	Grommet	614	691550	Pin-Cotter
			536	825117	Cleaner-Air Used on Type No(s). 0114, 0124, 0126, 1126.	616	806685	Crank-Governor
474F	841178	Alternator (20/50 Amp) Used on Type No(s). 0124, 0126, 1126.	544		Armature-Starter (Service With 691564 Starter Motor Only)	628A	806660	Screw (Fuel Pump Bracket)
479	843961	Screw (Screen Oil Pump)	552	690701	Bushing-Governor Crank	633	809638	Seal-Choke/Throttle Shaft (Choke Collar #1)
480	806660	Screw (Purge Hose)	552A	806686	Bushing-Governor Crank	633A	809644	Seal-Choke/Throttle Shaft (Choke Collar #2)
493	845729	Bracket-Mounting	562	690239	Bolt (Governor Control Lever)	633B	809641	Seal-Choke/Throttle Shaft (Throttle Shaft)
501	845907	Regulator	563	841735	Screw (Debris Screen Guard)	635	692076	Boot-Spark Plug
501A	794360	Regulator Used on Type No(s). 0006, 0128, 0129, 0137.	565	690682	Stud (Oil Filter Adapter)	643	692079	Retainer-Air Filter
501B	841170	Regulator Used on Type No(s). 0124, 0126, 1126.	573A	841310	Plate-Back ----- Note ----- 841314 Plate-Back Used on Type No(s). 0124.	643A	844932	Retainer-Air Filter
501C	691573	Regulator Used on Type No(s). 0136.			841311 Plate-Back Used on Type No(s). 0126, 1126.	649	842446	Stud (Air Cleaner Cover)
503	845016	Strap-Starter (60mm Long)	577	690795	Cable-Starter	654	690939	Nut (Carburetor)
505	844752	Nut (Governor Control Lever)	578	692306	Wire Assembly	668A	691500	Spacer
506	807120	Screw (Carburetor Cover)	578A	844547	Wire Assembly (With Diodes)	676	795036	Deflector-Muffler
507	691972	Insulator	582	807381	Clamp-Air Cleaner	676A	795038	Deflector-Muffler
510A	496881	Drive-Starter (Steel Ring Gear Only)	592	690939	Nut (Rewind Starter) (M6)	676B	396903	Deflector-Muffler
						677	810079	Screw (Muffler Deflector)
						677B	690661	Screw (Muffler Deflector) (#8-18x.375")
						678	841730	Spacer-Rewind
						683	691029	Nut (Starter Solenoid Terminal) (1/4"-20)

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

385700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
683A	845758	Nut (Starter Solenoid Terminal) (M6)	830	809157	Stud-Rocker Arm	961	807084	Screw (Air Cleaner Bracket) (M6x14mm Long)
691	842826	Seal-Governor Shaft	842	691870	Seal-ORing (Dipstick Tube)	----- Note -----		
711C	691492	Screw (Carburetor Shield)	851	493880s	Terminal-Spark Plug	691593	Screw (Air Cleaner Bracket) (M6x12mm Long)	
717	806440	Bracket-Air Cleaner	865	843768	Cover-Air Guide	841233	Screw (Air Cleaner Bracket) (M6x10mm Long)	
717A	843566	Bracket-Air Cleaner Used on Type No(s). 0114, 0124, 0126, 1126.	868	691963	Seal-Valve	964	590799	Cap-Connector
718B	806469	Pin-Locating	871	692057	Bushing-Valve Guide	964A	809640	Cap-Carburetor
727	841313	Cover-Starter Drive	875A	845217	Base-Air Cleaner	967B	692520	Filter-Pre Cleaner
729B	690586	Clip-Wire	877A	393814	Wire/Connector- Alternator (DC Only)	968	841822	Cover-Air Cleaner Used on Type No(s). 0114 0124, 0126.
732	690688	Screw (Starter Drive Cover)	877C	399916	Wire/Connector- Alternator (10 Amp)	968A	842620	Cover-Air Cleaner Used on Type No(s). 0114, 0124, 0126, 1126.
732A	841233	Screw (Starter Drive Cover)	879	807460	Cover-Carburetor	968B	808654	Cover-Air Cleaner
737	690679	Screw (Oil Filter Adapter)	883A	806425	Gasket-Exhaust	971	841853	Screw (Air Cleaner) (M6x103mm Long)
737A	841233	Screw (M6x10mm) (Oil Filter Adapter)	884	691956	Clamp-Muffler	975A	844947	Bowl-Float
741	846085	Gear-Timing	914	807084	Screw (Rocker Cover) (M6x14mm Long)	975C	809717	Bowl-Float Used on Type No(s). 0005, 0114, 0124, 0126, 1114, 1126.
788	691559	Bracket-Fuel Pump	918	791880	Hose-Vacuum (Cut To Required Length)	987	809639	Seal-Throttle Shaft
789	698332	Harness-Wiring Used on Type No(s). 0117, 0119, 0349.	920	845757	Solenoid-Starter Used on Type No(s). 0124, 0126, 1126.	988	692063	Gasket-Oil Adapter
789A	844914	Harness-Wiring	920B	846820	Solenoid-Starter	994	794945	Arrestor-Spark
797	693167	Nut (Brush Retainer)	930	846284	Guard-Rewind	996	845211	Base-Air Cleaner
797A	691029	Nut (Brush Retainer)	934	691058	Screw (Fan Retainer)	996A	845543	Shield-Carburetor
801		Cap-Drive (No Longer Available) (Service With 691564 Starter Motor Only, Reference 309)	947	842109	Solenoid-Fuel (5/6-24 Thread) (Comes with Carburetor Ref Item 125 & 125A) Without Wire Harness, -Ref Item 789A) (Used After Code Date 09111700)	1004B	690865	Duct-Air
802A	691286	Cap-End	947B	809632	Solenoid-Fuel (M8x1 Thread,) (With Wire Harness) (Used Before Code Date 09111800)	1005	841439	Fan-Flywheel (Used After Code Date 04011800).
803A		Housing-Starter (No Longer Available) (Service With 691564 Starter Motor Only, Reference 309)	949	845728	Guard-Debris Screen	----- Note -----		
803E	820783	Housing-Starter	955	691511	Plug-Carburetor (M8x1 Thread)	809179	Fan-Flywheel (Used Before Code Date 04011900). (No Longer Available)	
812	692055	Nut (Rocker Cover)				1006	690452	Retainer-Fan
813	690635	Clamp				1009	691902	Screw (Starter Motor)
813A	807377	Clamp						
829	841999	Hose-Oil (Cut To Required Length)						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

5959-16

Assemblies include all parts shown in frames.

06/10/2016

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1017	690878	Screen-Oil Pump (Used Before Code Date 08022700).	1027	842921	Filter-Oil	1135	806497	Washer (Crankcase Cover/Sump)
1017A	843960	Screen-Oil Pump (Used After Code Date 08022600).	1028	843898	Adapter-Oil Filter	1155	806647	Washer (Oil Cooler)
1022	806039s	Gasket-Rocker Cover	1029	807323	Arm-Rocker	1157	690713	Nut (Bell Crank)
1023	843750	Cover-Rocker (Includes Breather Assembly)	1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)	1176	842067	Nut (Exhaust Manifold)
1023D	691558	Cover-Rocker (Cylinder #1) (With Fuel Pump)	1046	841165	Plug-Blower Housing	1197	841552	Screw
1024	843959	Pump-Oil (For Replacement Sump-Engine, Order Reference 4) (Used After Code Date 08022600).	1051A	691124	Ring-Retaining	1254	807084	Screw (Rocker Arm Stud)
		----- Note ----- Pump-Oil (Oil Pump Is No Longer Available)(See Reference 4 For Correct Replacement Sump) (Used Before Code Date 08022700).	1054	280275	Tie-Cable	1315	842445	Hose-Air Cleaner
1025	690689	Spool-Governor	1058	279765	Operator's Manual	1334	841233	Screw (Air Guide)
1026	691836	Rod-Push (Intake)(Steel)	1059	698516	Kit-Screw/Washer	1337	841233	Screw Air Cleaner Bracket Used on Type No(s). 0114, 0124, 0126.
		----- Note ----- 691758 Rod-Push (Exhaust)(Aluminum)	1090	691293	Retainer-Brush	1392	690939	Nut (Rewind Guard)
			1091	691515	Cap-Limiter	1395	807084	Screw (Air Cleaner Base) (M6x14mm Long)
			1095B	842662	Gasket Set-Valve	1406	842623	Valve-Debris
			1100	791959	Pivot-Rocker Arm	1425	844712	Hose-Purge Line (Cut To Length)
			1119	691552	Screw (Alternator)	1431	844035	Washer (Hose-Purge Line)
			1121	810056	Nut (Fuel Pump Bracket) (M8)			
			1122	93410	Screw (Blower Housing Adapter)(#8-18x 5/16)			
			1127	809715	Screw (Float Bowl To Carburetor Body)			
			1130A	690869	Stud (Intake Manifold) (M6x112mm)			
					----- Note ----- 842448 Stud (Intake Manifold) (M6x98mm)			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121

Valve Gasket Set-Reference 1095B

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

