

386700

Illustrated Parts List

Model Series

386700

AIR COOLED

TYPE NUMBERS







0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0024, 0025, 0026, 0036, 0100, 0110, 0111,
0112, 0113, 0114, 0116, 0117, 0118, 0119, 0120, 0122, 0123, 0126, 0127, 0128, 0131, 0132, 0133,
0134, 0135, 0137, 1021, 1119, 1127, 1131, 1292, 1293, 3024, 3025, 3026, 3036.

Not for
Reproduction



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without
permission
in writing from Briggs & Stratton Corporation

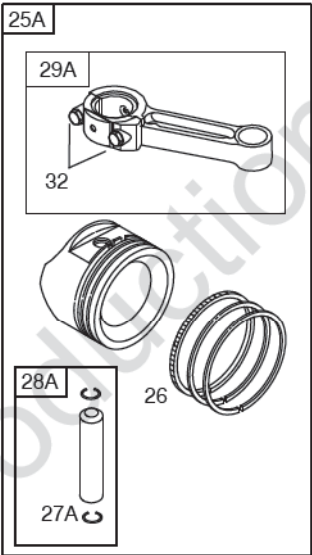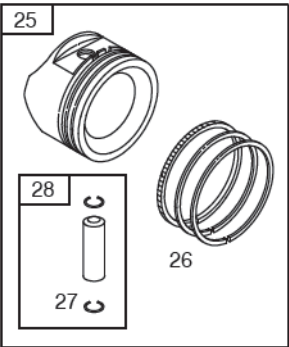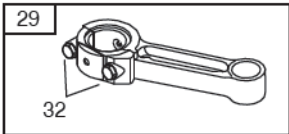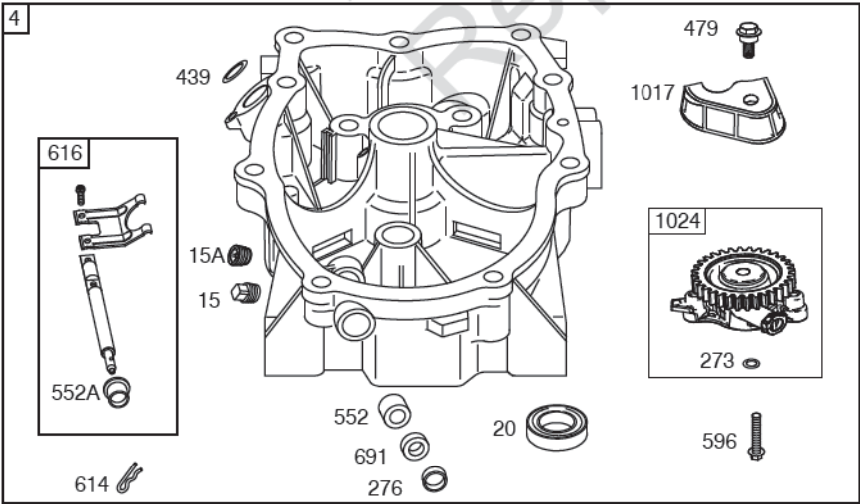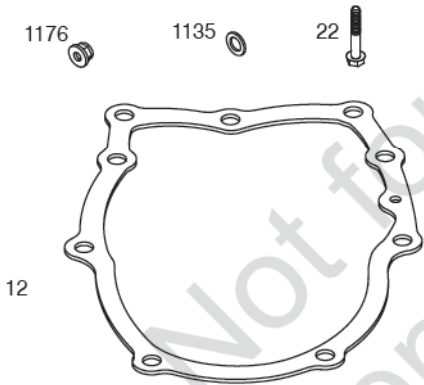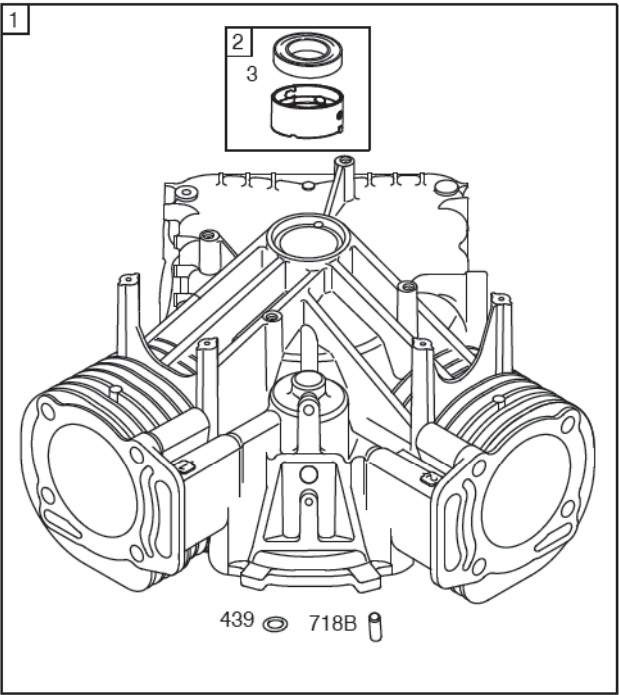

1036 EMISSIONS LABEL



1058 OPERATOR'S MANUAL


1330 REPAIR MANUAL


1319 WARNING LABEL





REQUIRED when replacing parts with warning labels affixed.

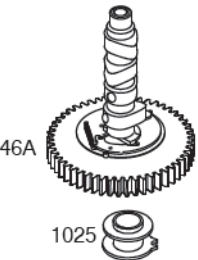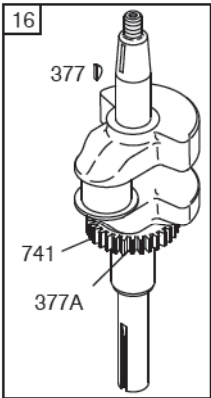


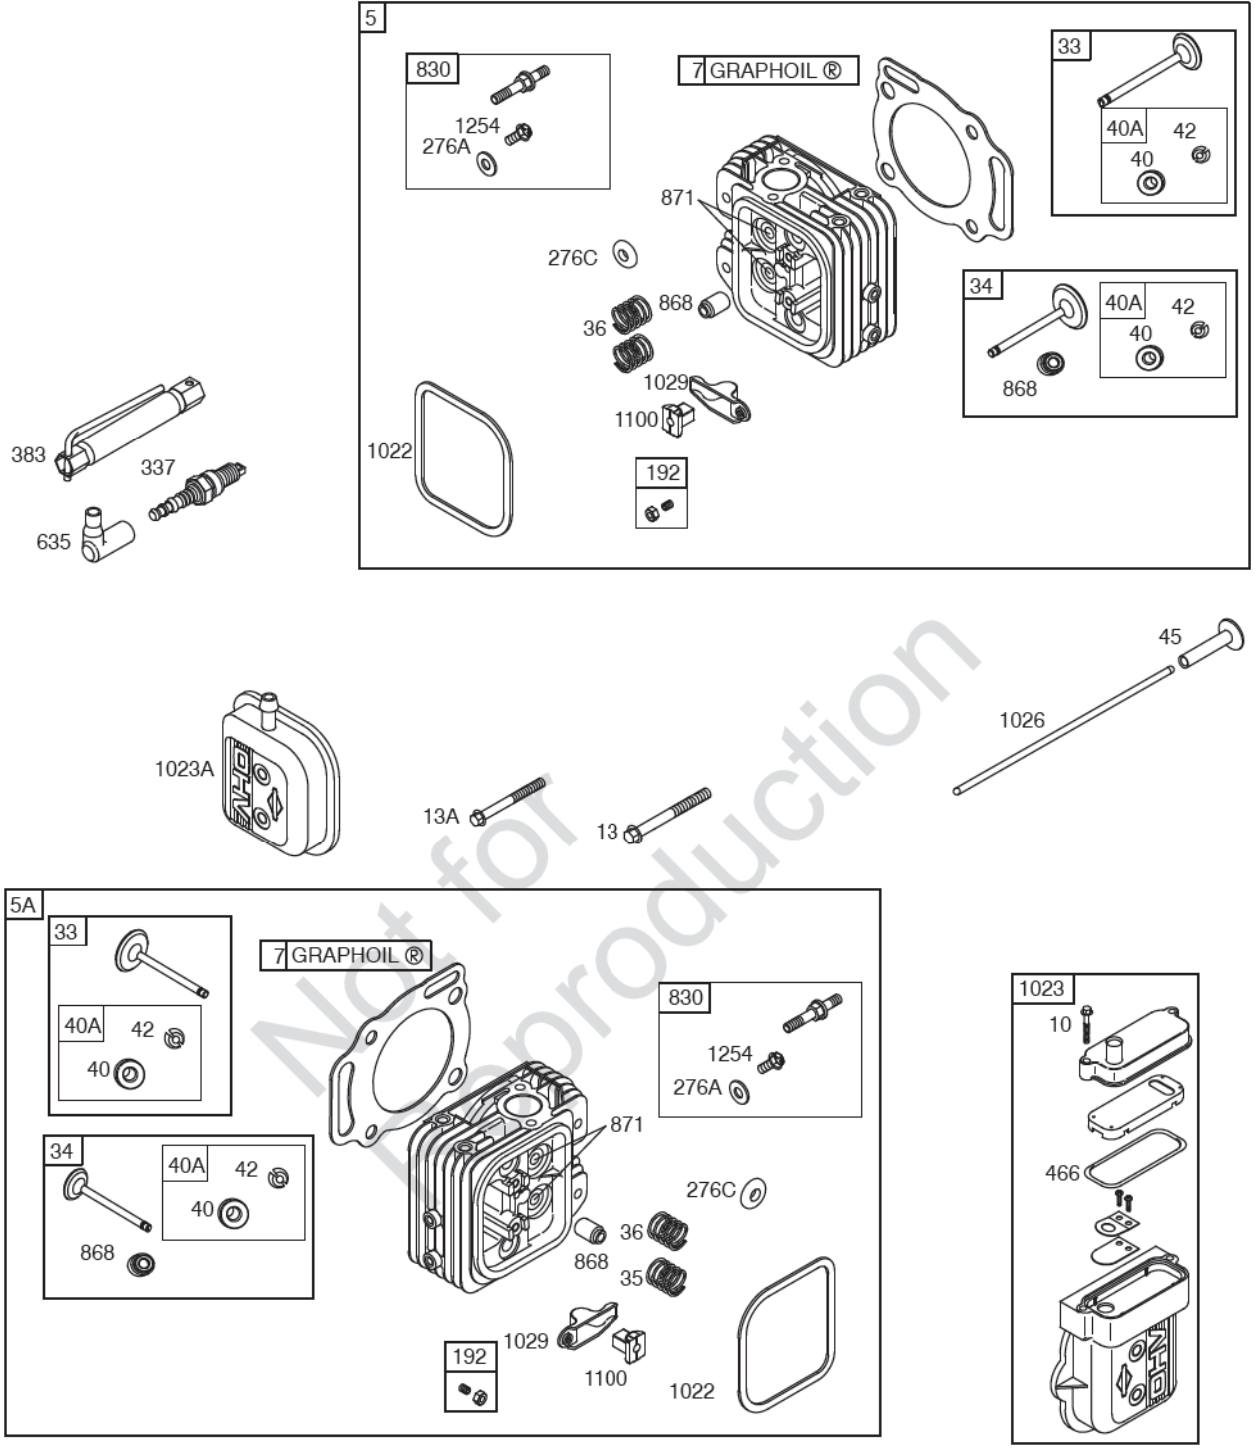


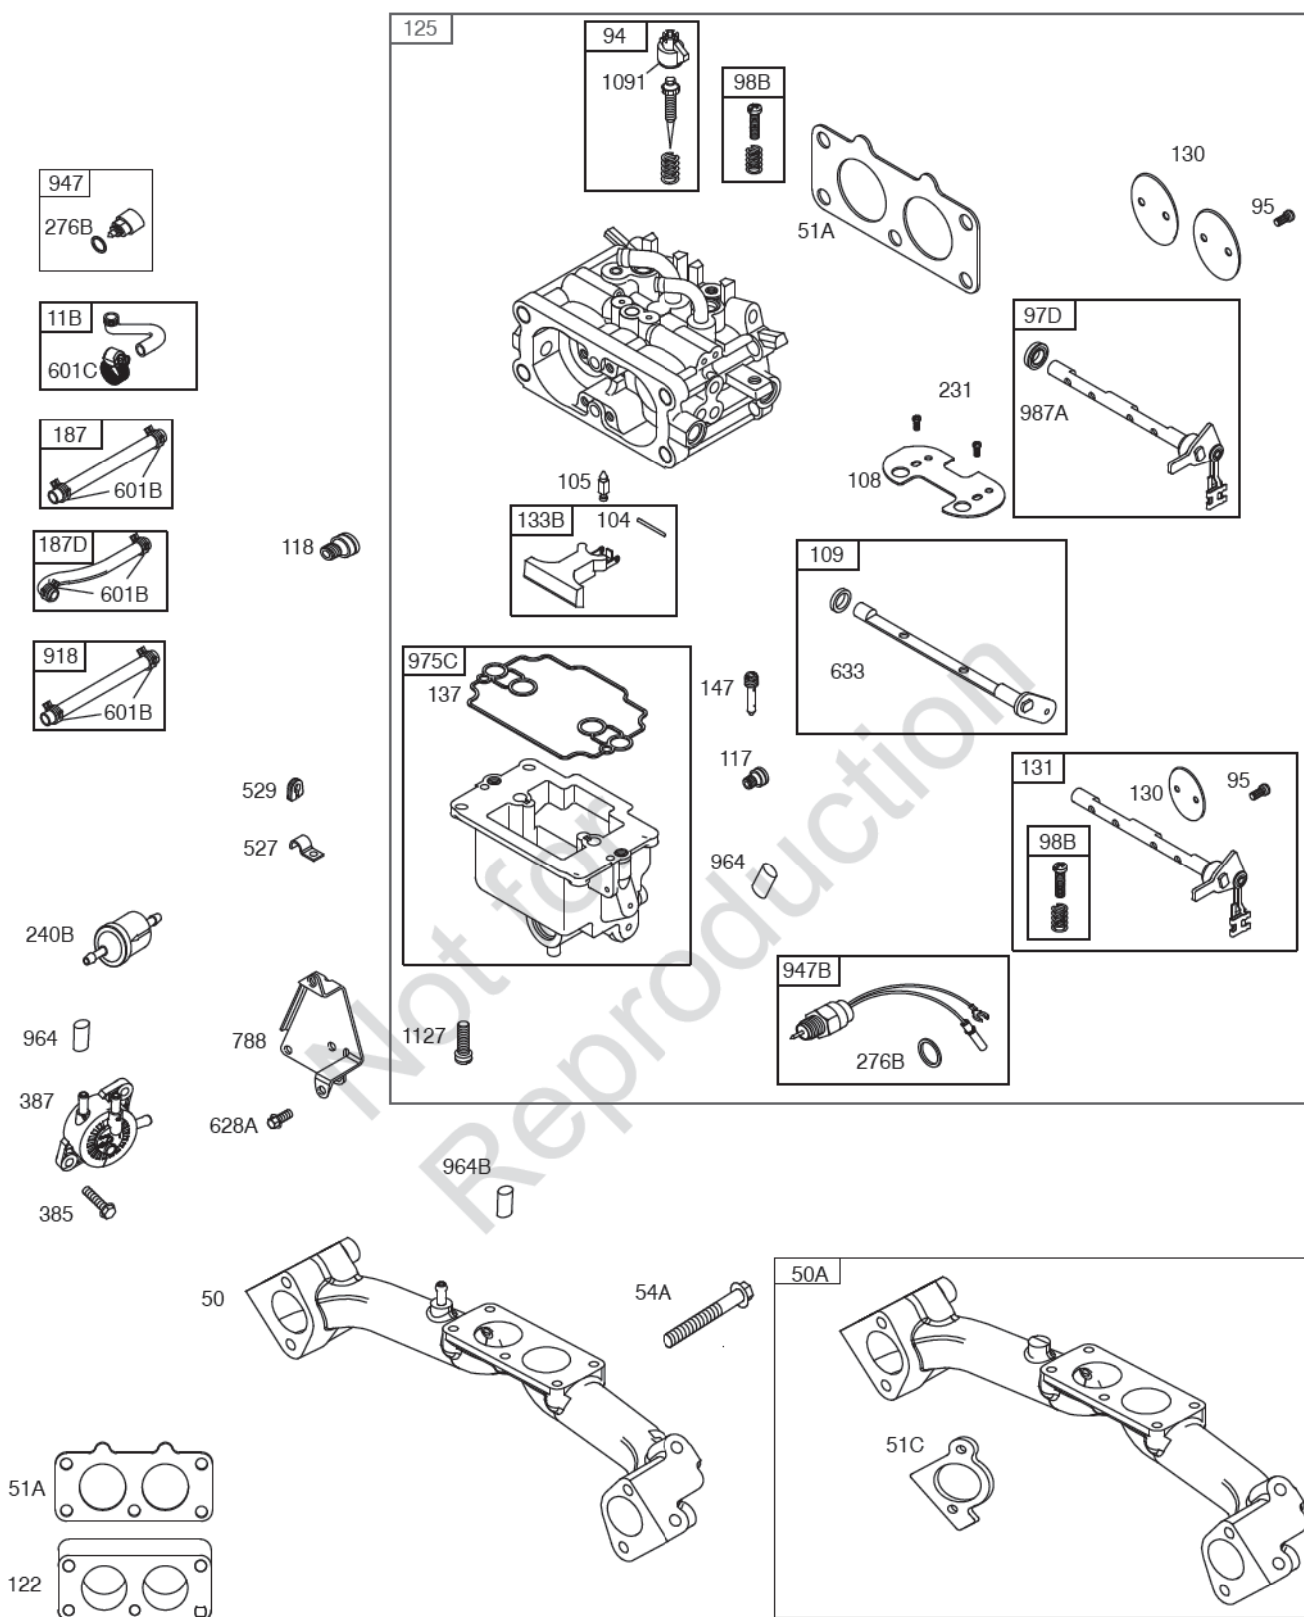


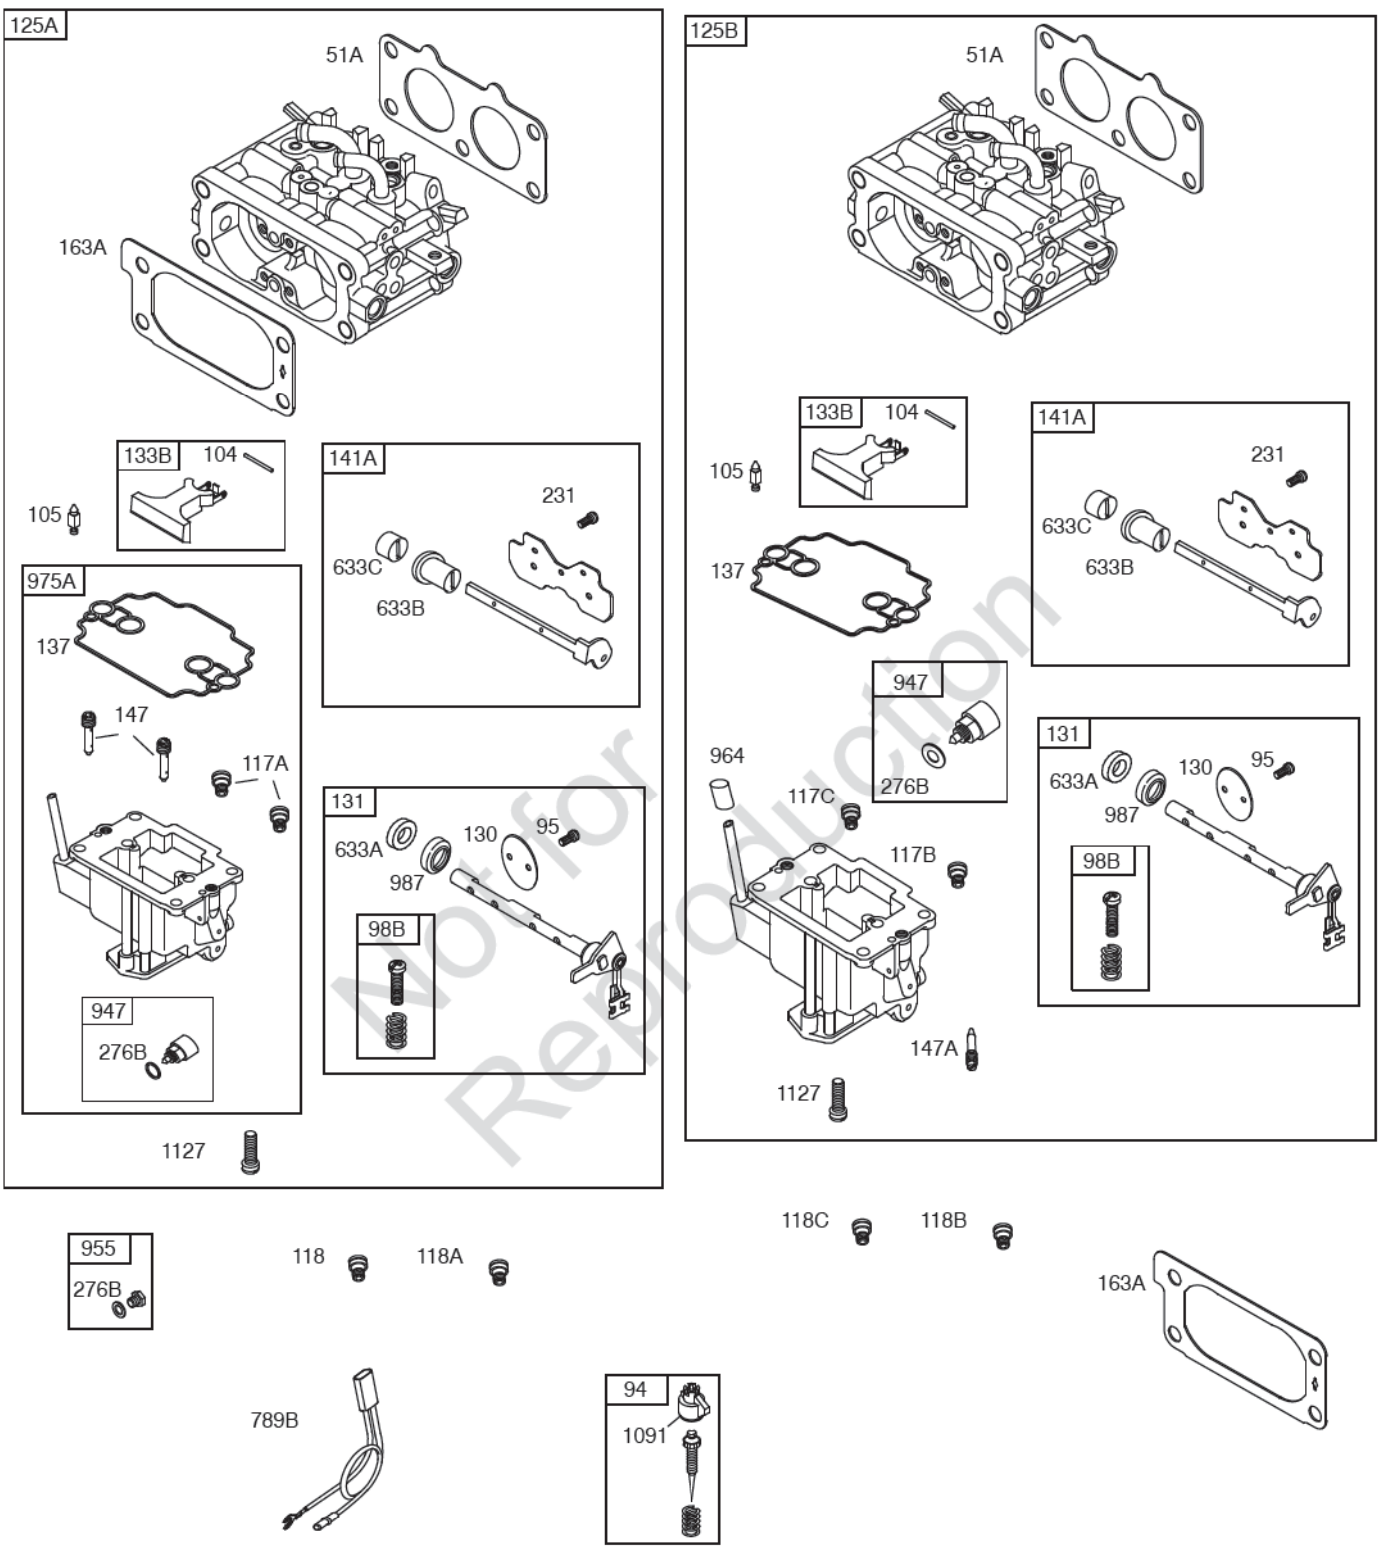


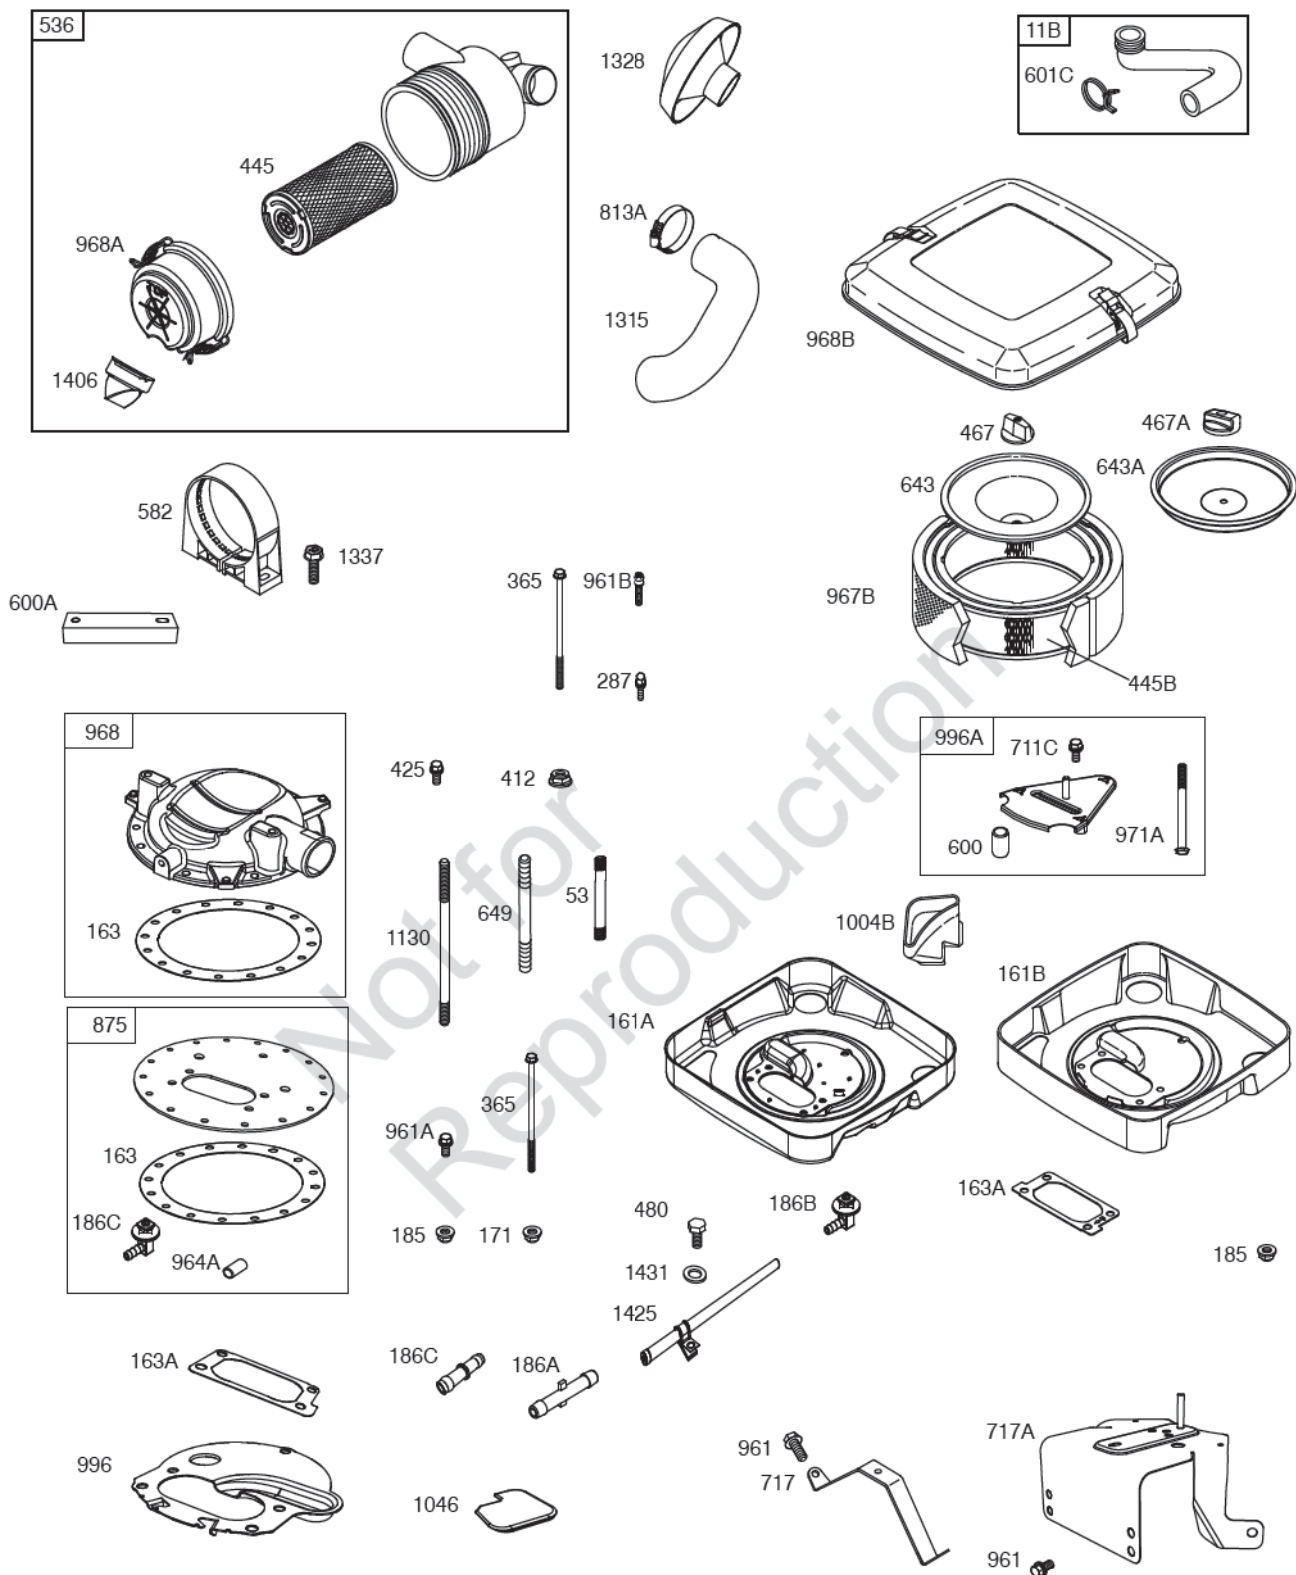





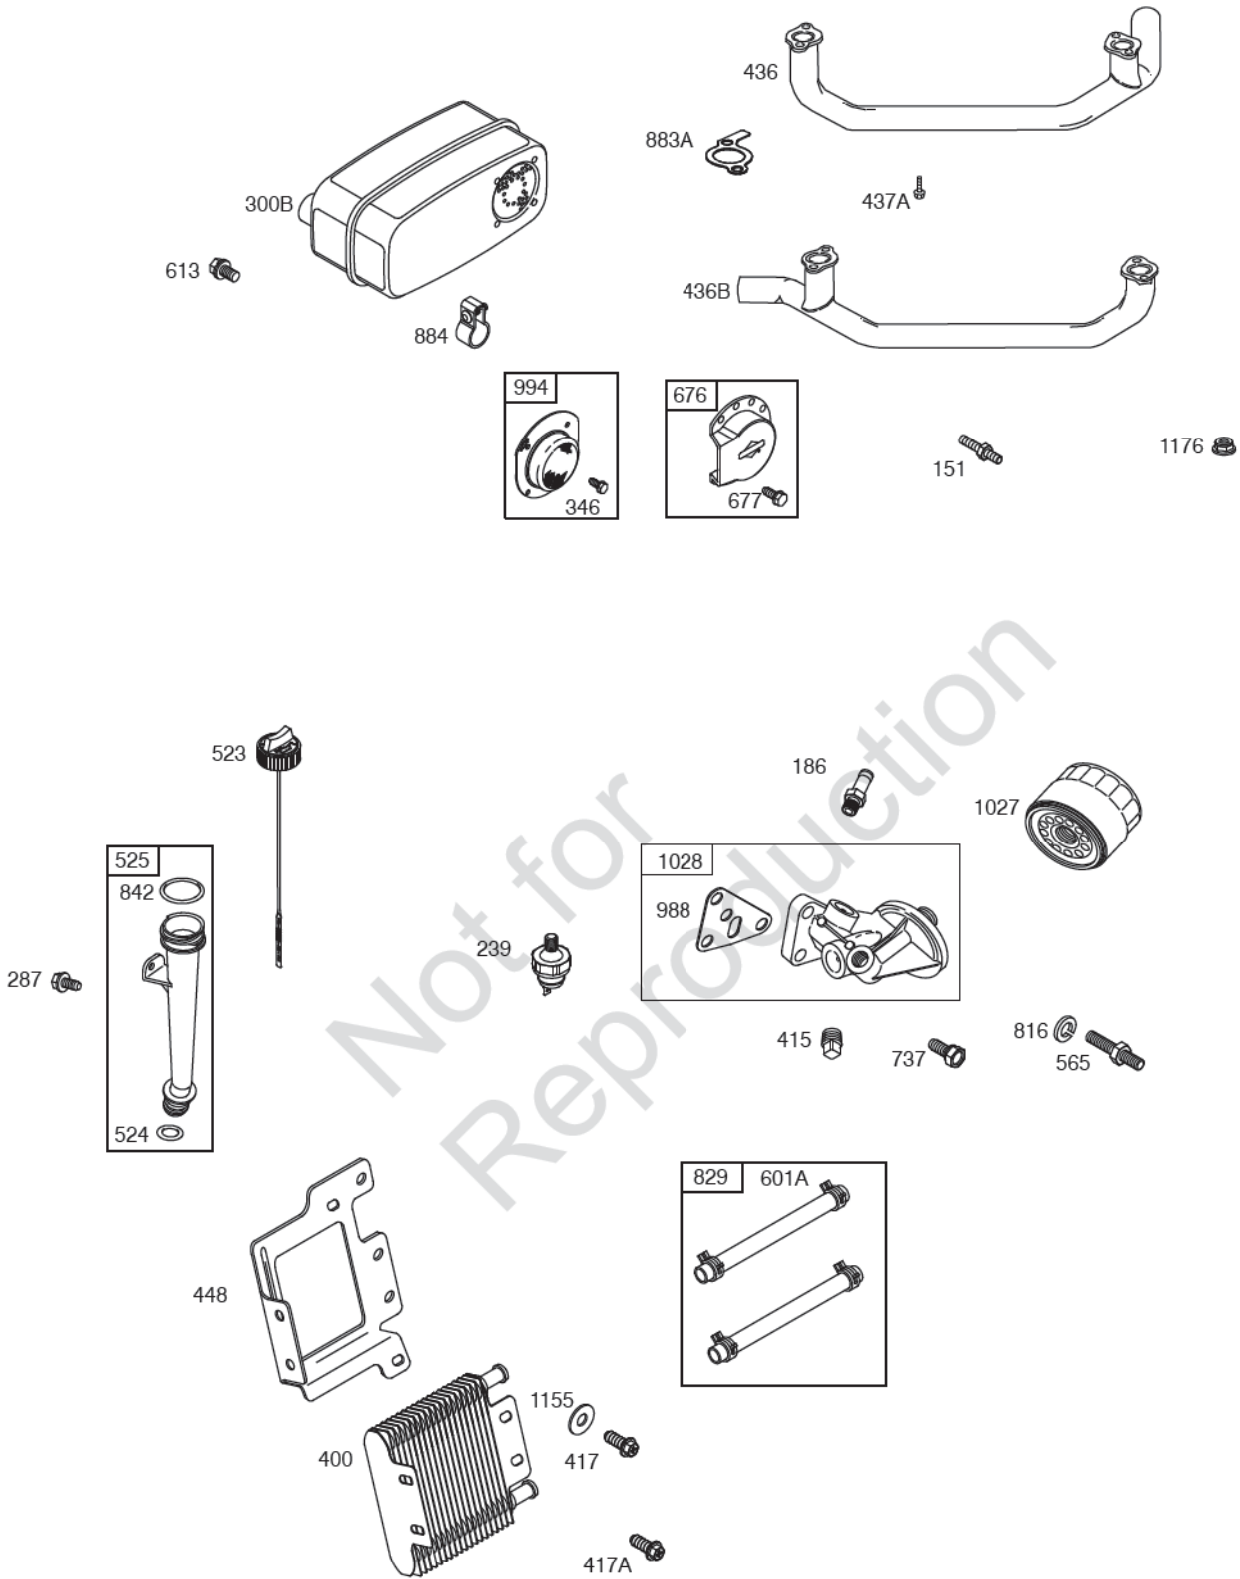


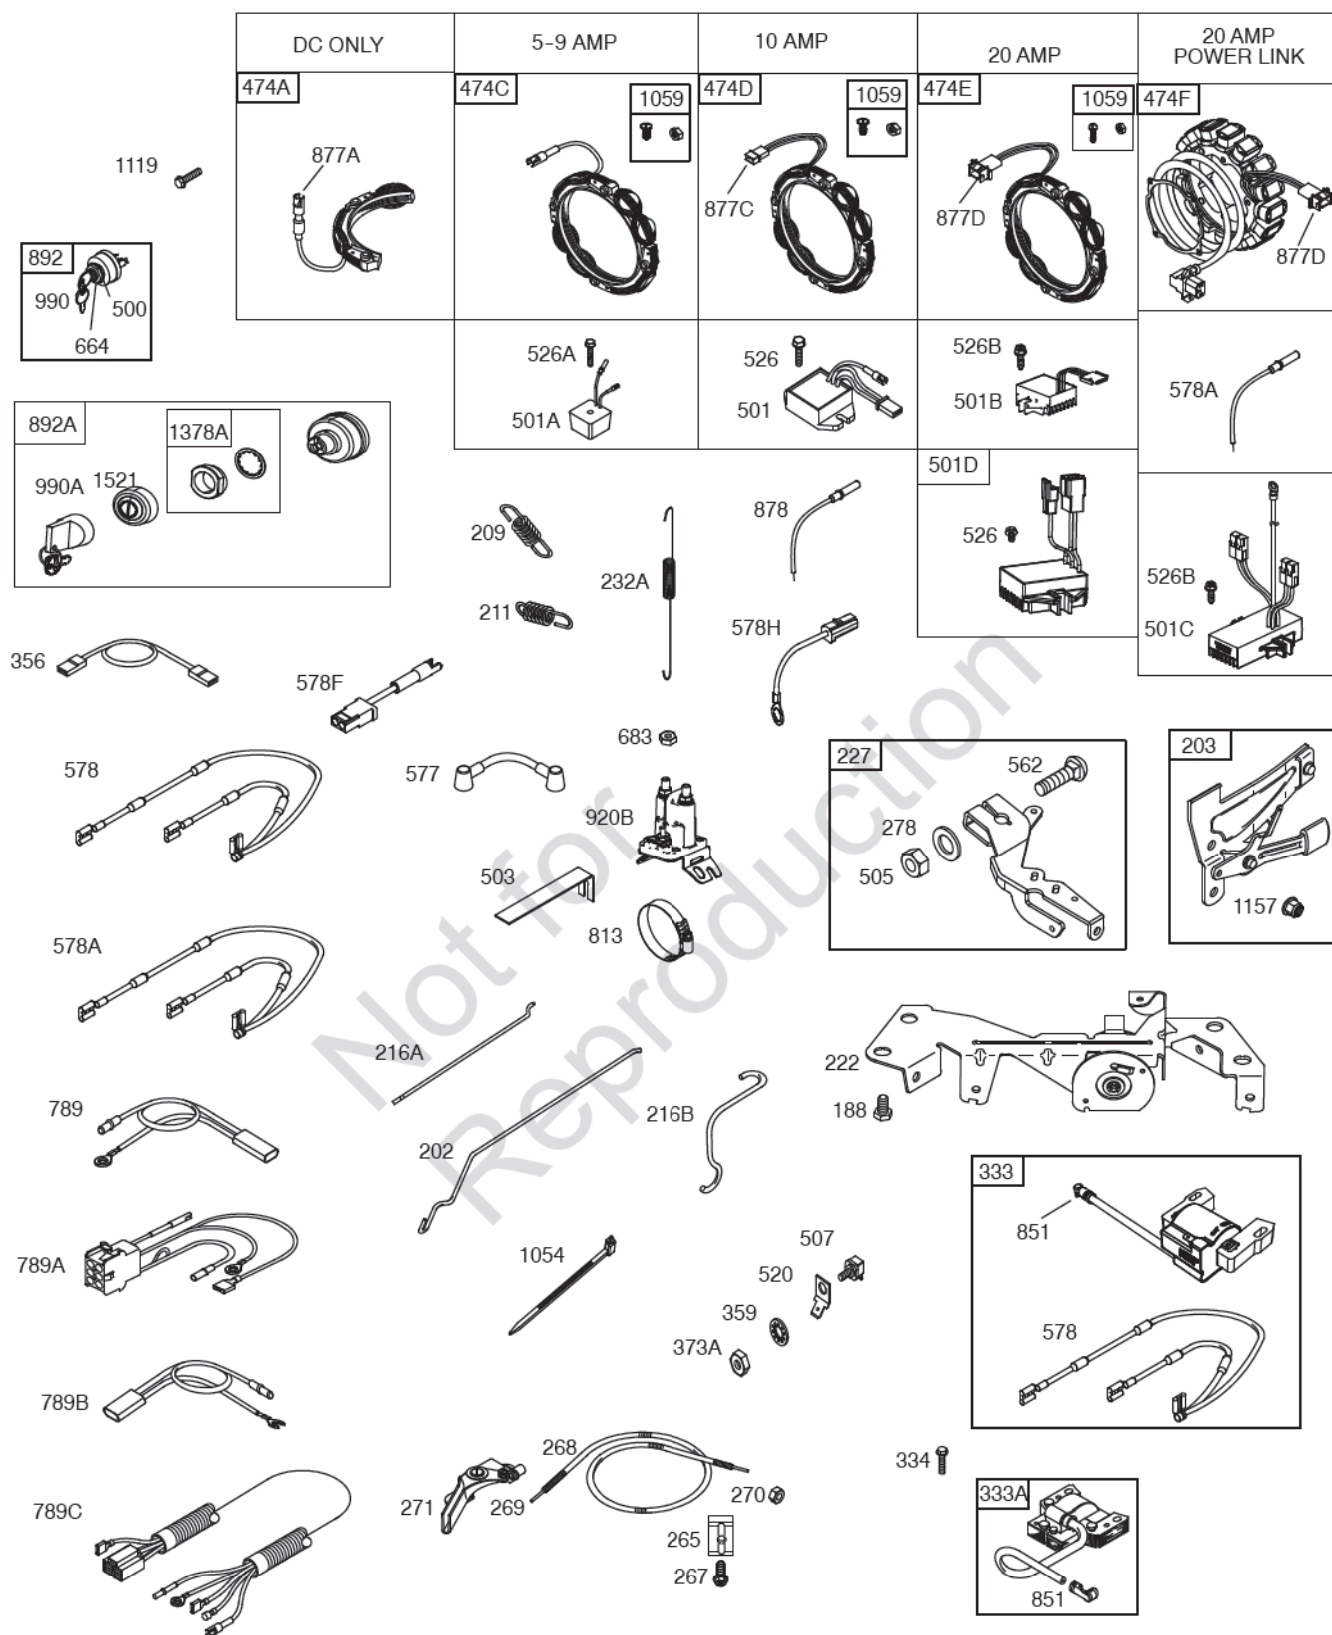

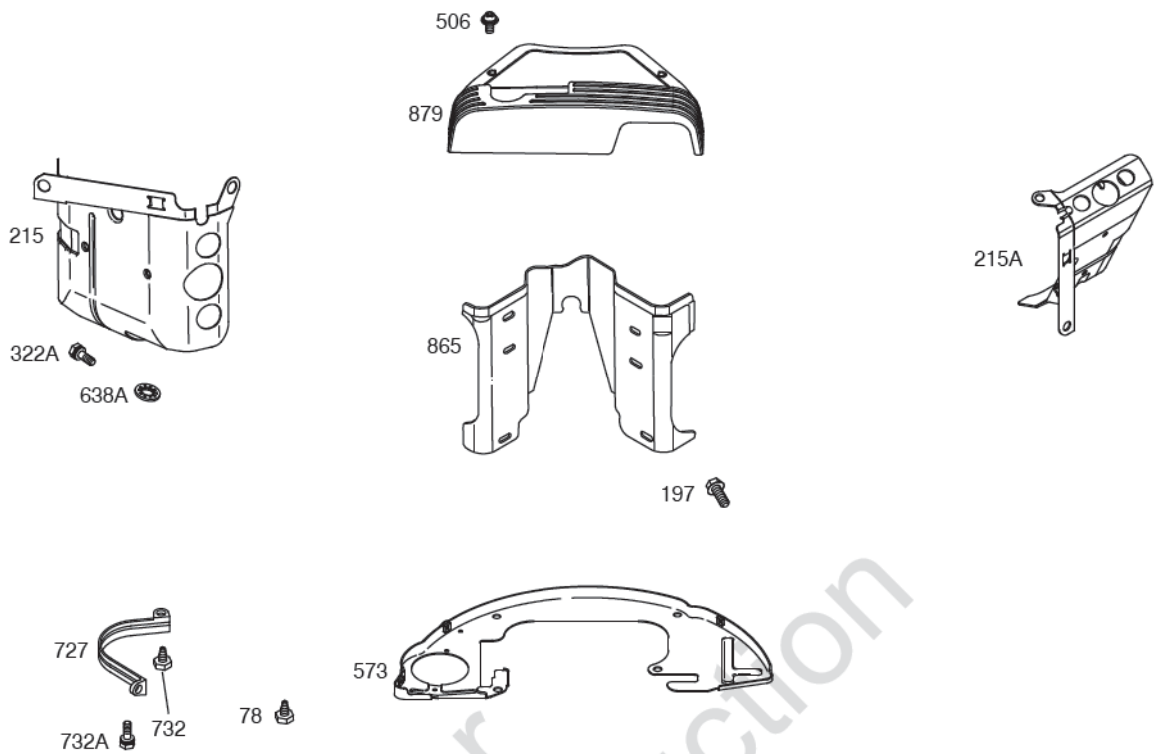

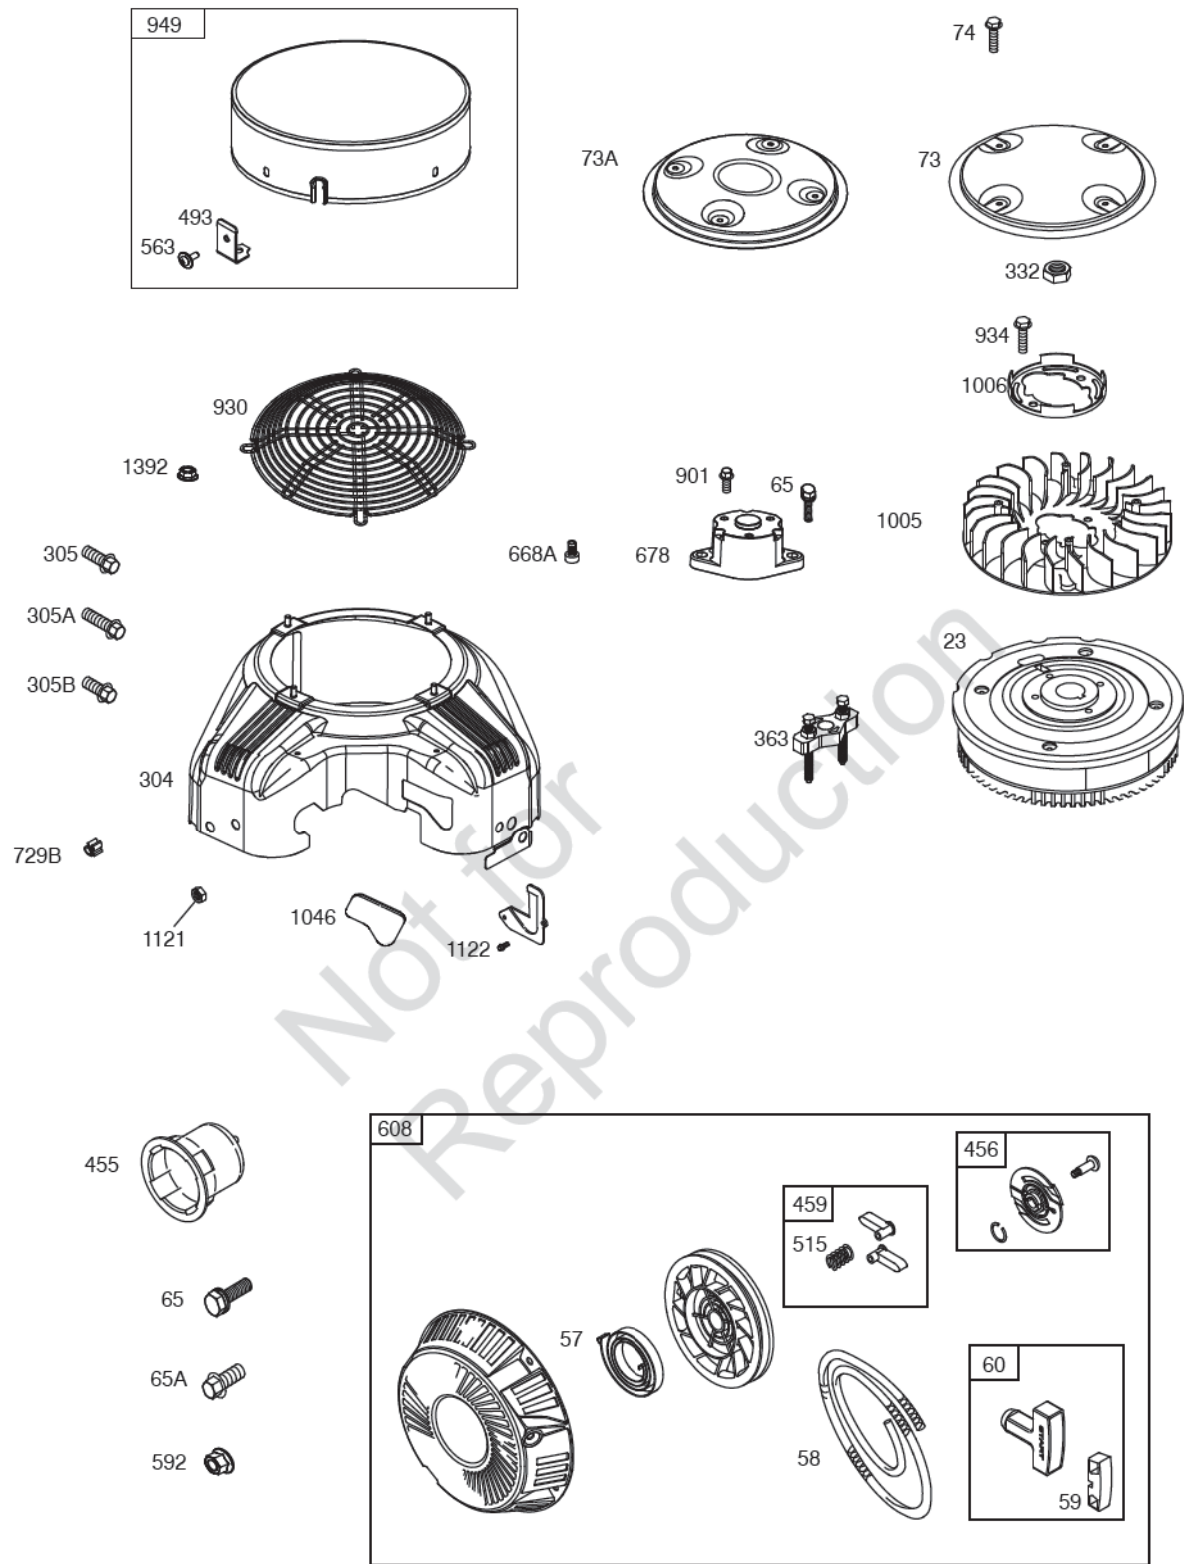

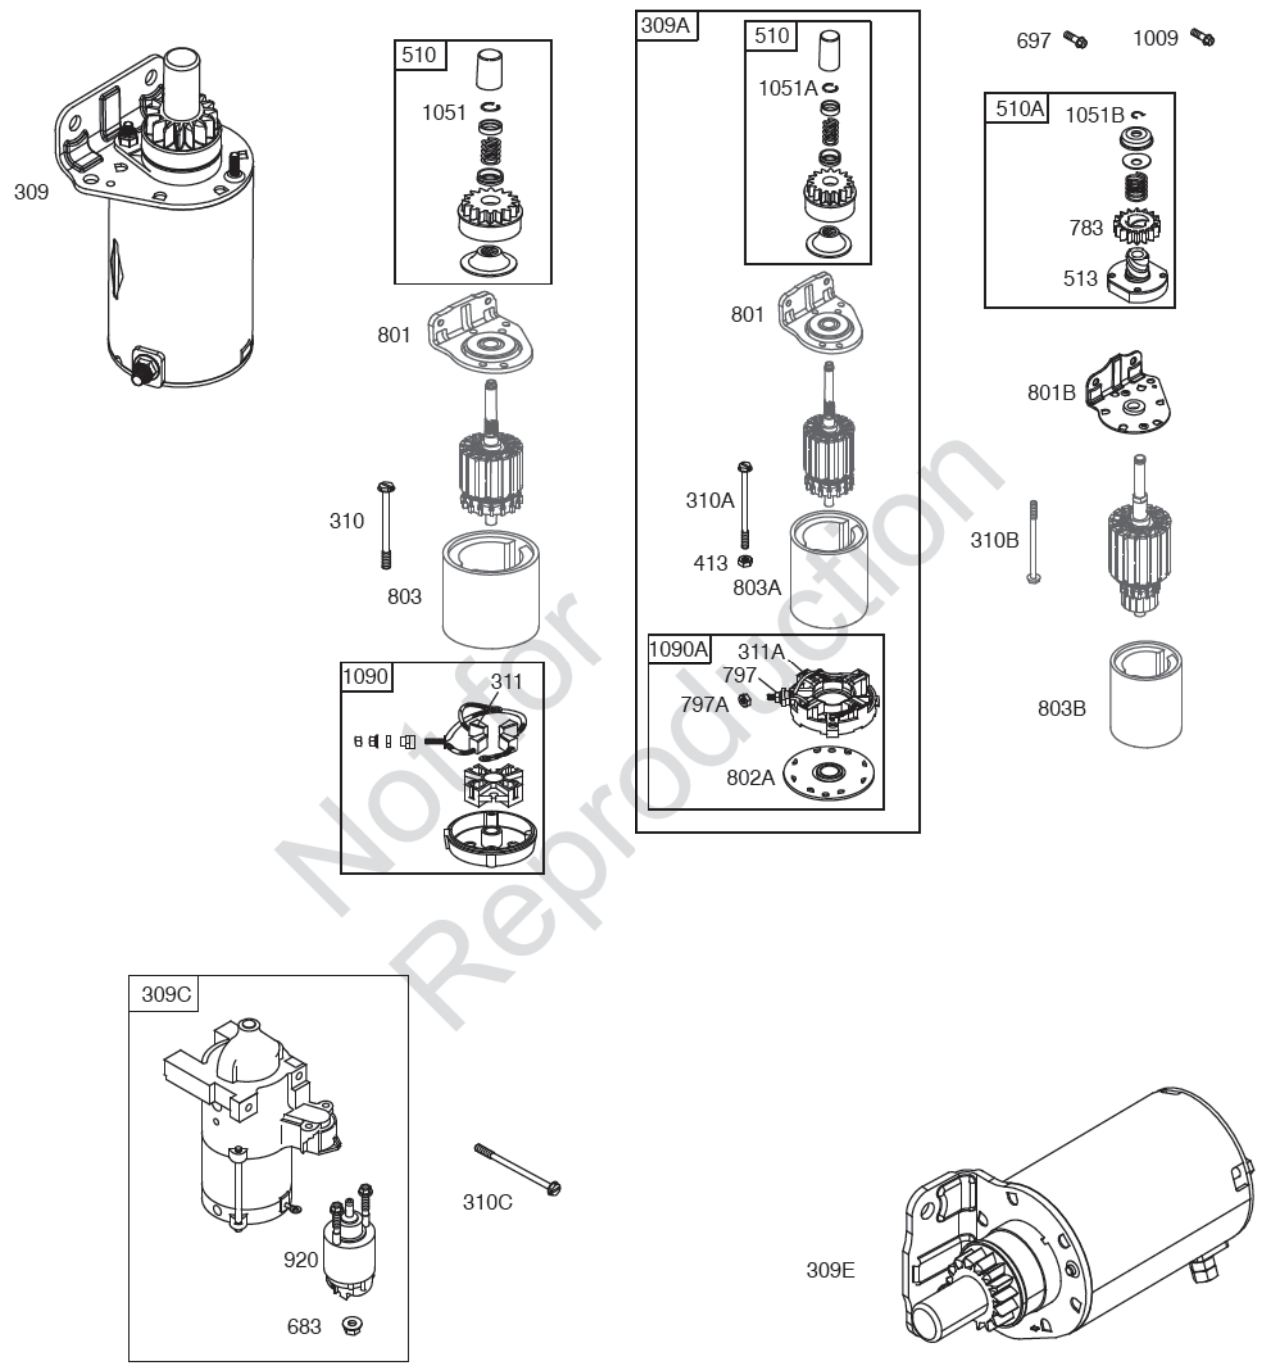

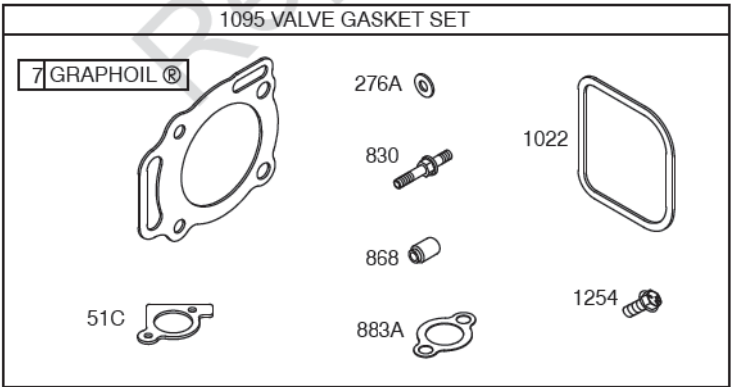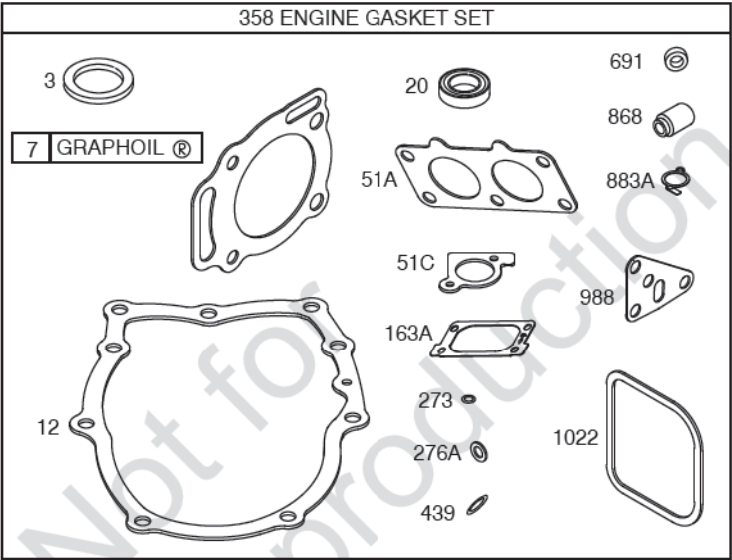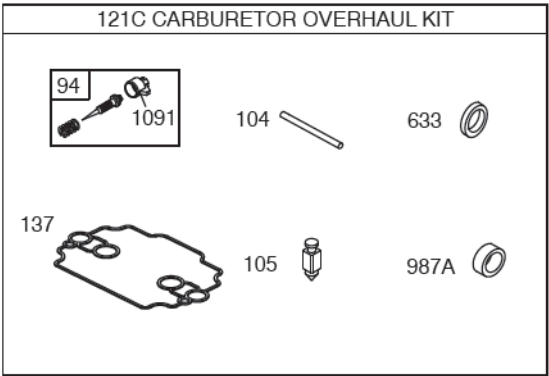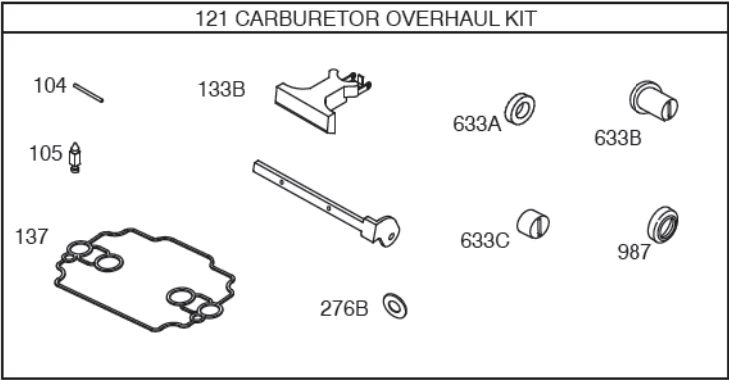

Valve Gasket Set-Reference 1095

386700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
28A	808526	Pin-Piston (Used Before Code Date 07063000).	73	841440	Screen-Rotating	118	809723	Jet-Main (High Altitude) (Used Before Code Date 09122400).
29	807900s	Rod-Connecting (Used After Code Date 07062900).	73A	841662	Screen-Rotating ----- Note ----- 846079 Screen-Rotating Used on Type No(s). 0003.	118A	842153	Jet-Main (High Altitude) (5000 ft.) (Left/Right) (Used After Code Date 09122300).
29A		Rod-Connecting (See Reference 25 for replacement) (Used Before Code Date 07063000).	74	841441	Screw (Rotating Screen)			----- Note ----- 809708 Jet-Main (High Altitude) (9000 ft.) (Left/Right) (Used After Code Date 09122300).
32	690698	Screw (Connecting Rod)	78	690688	Screw (Flywheel Guard)			
33	806419	Valve-Exhaust	94	842883	Kit-Idle Mixture			
34	845712	Valve-Intake (Used After Code Date 12013100) ----- Note ----- 843751 Valve-Intake (Comes w/o #868) (Used Before Code Date 12020100)	95	690718	Screw (Throttle Valve)			
35	692084	Spring-Valve (Intake)	97D	808715	Shaft-Throttle	118B	809708	Jet-Main (High Altitude) (5000 ft.) (Left) (Used After Code Date 09122300).
36	692084	Spring-Valve (Exhaust)	98B	809716	Kit-Idle Speed			Used on Type No(s). 0026, 0119, 0120, 0122, 0123, 0127, 1119, 1127, 3026 ----- Note ----- 842153 Jet-Main (High Altitude) (5000 ft) (Right) (Used After Code Date 09122300).
40	692058	Retainer-Valve	104	690739	Pin-Float Hinge			Used on Type No(s). 0026, 0119, 0120, 0122, 0123, 0127, 1119, 1127, 3026
40A	844895	Retainer-Valve	105	809759	Valve-Float Needle	118C	809723	Jet-Main (High Altitude) (9000 ft.) (Left) (Used After Code Date 09122300).
42	807683	Keeper-Valve	108	809643	Valve-Choke			Used on Type No(s). 0026, 0119, 0120, 0122, 0123, 0127, 1119, 1127, 3026
45	843379	Tappet-Valve	109	808181	Shaft-Choke			
46A	690927	Camshaft	117	809708	Jet-Main (Standard) (Used Before Code Date 09122400).			
50	844504	Manifold-Intake Used on Type No(s). 0024, 0025, 0026, 0036, 0127, 0131, 1127, 1293, 3024, 3025, 3026, 3036	117A	809635	Jet-Main (Standard) (Used After Code Date 09122300).			
50A	806376	Manifold-Intake	117B	809649	Jet-Main (Standard) (Right) (Used After Code Date 09122300).			
51A	690950	Gasket-Intake						
51C	806418	Gasket-Intake (Manifold/Heads)	117C	843783	Jet-Main (Standard) (Left) (Used After Code Date 09122300).			
53	690869	Stud (Carburetor)			Used on Type No(s). 0026, 0119, 0120, 0122, 0123, 0127, 1119, 1127, 3026			
54A	806444	Screw (Intake Manifold)						
57	692086	Spring-Rewind Starter						
58	66574	Rope-Starter						
59	805957	Insert-Grip						
60	808167	Grip-Starter Rope						
65	690341	Screw (Rewind Starter) (5/16-18, x 0.875 Lg)						
65A	841233	Screw (Rewind Starter) (M6 x 10mm Lg)						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121 & 121C

Valve Gasket Set-Reference 1095

5960-14

Assemblies include all parts shown in frames.

12/09/2016

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
121	873787	Kit-Carburetor Overhaul (Used After Code Date 09122300).	171	690941	Nut (Air Cleaner) (M8)	203	808753	Crank-Bell
121C	842261	Kit-Carburetor Overhaul (Used Before Code Date 09122400).	185	690939	Nut (Air Cleaner Base) (M6)	209	692070	Spring-Governor ----- Note -----
122	690870	Spacer-Carburetor	186	693184	Connector-Hose			690710 Spring-Governor Used on Type No(s). 0007, 0111.
125	809705	Carburetor (No Longer Available) (Use Ref #125A) (Used Before Code Date 09122400).	186A	845121	Connector-Hose			692071 Spring-Governor Used on Type No(s). 0001, 0002, 0004, 0008, 0010, 0036, 0037, 0112, 0116, 0117, 1021.
125A	844370	Carburetor (Used After Code Date 09122300).	186B	845141	Connector-Hose			690716 Spring-Governor Used on Type No(s). 0003.
125B	845587	Carburetor Used on Type No(s). 0026, 0119, 0120, 0122, 0123, 0127, 1119, 1127, 3026	186C	844032	Connector-Hose Used on Type No(s). 1127.	211	692069	Spring-Governed Idle
130	809642	Valve-Throttle	187	791766	Line-Fuel (15" Long)(Cut To Required Length) ----- Note -----	215	841183	Cover-Cylinder Head (Cylinder #2)
131	809718	Kit-Throttle Shaft			791745 Line-Fuel (23" Long) (Cut To Required Length) Used on Type No(s). 0036, 0117.	215J	841182	Cover-Cylinder Head (Cylinder #1)
133B	809637	Float-Carburetor	187D	791744	Line-Fuel (Formed) (14' Long) (Cut To Required Length)	216A	690871	Link-Choke
137	809645	Gasket-Float Bowl			188	692056	216B 691542 Link-Choke	
141A	843785	Kit-Choke Shaft			192	807623	222 845305 Bracket-Control	
146	691639	Key-Timing			197	807163	227 690236 Lever-Governor Control	
147	809709	Jet-Pilot			202	690867	231 690718 Screw (Choke Valve)	
147A	845727	Jet-Pilot ----- Note -----					232A 690874 Spring-Governor Link	
		841920 Jet-Pilot Used on Type No(s). 0026, 0119, 0120, 0122, 0123, 0127, 1119, 1127, 3026					239 690233 Switch-Oil Pressure ----- Note -----	
151	841185	Stud (Exhaust Manifold)						697049 Switch-Oil Pressure Used on Type No(s). 0113, 0118, 0127, 1127.
161A	845217	Base-Air Cleaner Used on Type No(s). 0134, 1131, 3024, 3025, 3036.						240B 691035 Filter-Fuel
161B	808676	Base-Air Cleaner						265 691024 Clamp-Casing
163	841823	Gasket-Air Cleaner						267 692083 Screw (Casing Clamp) (M5 x 12mm Lg) ----- Note -----
163A	692087	Gasket-Air Cleaner (Used With Metal Air Cleaner Base)						841552 Screw (Casing Clamp) (M5 x 20mm Lg)

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121 & 121C

Valve Gasket Set-Reference 1095

5960-15

Assemblies include all parts shown in frames.

12/09/2016

386700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
268	691025	Casing-Control Wire (Cut To Required Length)	310A	690323	Screw (Starter Motor) (#10-24 x 4.375 Lg)	377	808095	Key-Woodruff
269	691026	Wire-Control (Cut To Required Length)	310B	691263	Screw (Starter Motor) (M8x98mm Lg) (No Longer Available)	377A	691639	Key-Woodruff
270	691027	Nut (Control Wire Casing)	311		Brush Set (For Replacement Starter Motor, Order Reference 309)	383	19576s	Wrench-Spark Plug
271	691028	Lever-Control	311A	497608	Brush Set	385	807084	Screw (Fuel Pump)
273	690681	Seal-O Ring (Oil Pump)	322A	841233	Screw (Cylinder Head Cover)	387	808656	Pump-Fuel
276	690704	Washer-Sealing (Crankcase Cover/Sump)	332	690887	Nut (Flywheel)	400	846489	Cooler-Oil
276A	807085	Washer-Sealing (Carburetor Plug)	333	845606	Armature-Magneto (Used After Code Date 09100700).	412	690941	Nut (Air-Cleaner) (M8)
276B	806476	Washer-Sealing (Float Bowl)	333A	591459	Armature-Magneto (Used Before Code Date 09100800).	413	693587	Nut (Starter Motor)
276C	691766	Washer-Sealing (Cylinder Head)	334	692066	Screw (Magneto Armature)	415	794903	Plug (Square Head)
278	842122	Washer (Governor Control Lever)	337	491055s	Plug-Spark	417	843345	Screw (Oil Cooler) (M6x8mm)
287	807084	Screw (M6 x 14mm Lg)			----- Note -----	417A	841233	Screw (Oil Cooler) (M6x10mm Lg)
300B	498984s	Muffler Used on Type No(s). 0001, 0004, 0110, 0117, 0133.			792015 Plug-Spark Used on Type No(s). 0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0024, 0025, 0026, 0036, 0037, 0112, 0116, 0117, 0126, 0128, 0132, 0133, 0134, 0135, 0137, 3024, 3025, 3026, 3036, 3037.	425	691593	Screw (Cover-Air Cleaner) (M6x12mm Lg)
304	841489	Housing-Blower	346	794845	Screw (Arrester- Spark)	436	808916	Manifold-Exhaust Used on Type No(s). 0110.
305	692056	Screw (Blower Housing) (M8 x 14mm)	356	807063	Wire-Stop Used on Type No(s). 0111, 0118, 0127, 1127.	436B	808909	Manifold-Exhaust Used on Type No(s). 0116, 0117, 0132, 0133.
305A	692062	Screw (Blower Housing) (M8 x 18mm Lg)	357	691483	Key-Drive Pulley	437A	691902	Screw (Exhaust Manifold)
305B	841233	Screw (Blower Housing) (6M x 10 mm)	358	842658	Gasket Set-Engine	439	692154	Seal-O Ring (Crankcase Cover/Sump)
309	846451	Motor-Starter (Steel Ring Gear Only)	359	691077	Washer (Ground Terminal)	445	820263	Filter-Air Cleaner Cartridge
309A		Motor-Starter (For Replacement Starter Motor, Order Reference 309)	363	19203	Puller-Flywheel	445B	692519	Filter-Air Cleaner Cartridge (Round)
309C	845759	Motor-Starter Used on Type No(s). 0132, 3037.	365	690866	Screw (Carburetor) (M6x85mm Lg)	448	841488	Bracket-Oil Cooler
309E	844717	Motor-Starter (Used After Code Date 11011400).	373A	691612	Nut (Ground Terminal)	455	841794	Cup-Flywheel
310		Screw (Starter Motor) (For Replacement Starter Motor, Order Reference 309)				456	845219	Plate-Pawl Friction
						459	845218	Pawl-Ratchet
						466	806466	Seal-O Ring (Breather Assembly)
						467	691985	Knob-Air Cleaner
						467A	844618	Knob-Air Cleaner
						474A	592828	Alternator (DC Only) Used on Type No(s). 0004, 0116, 0117.

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121 & 121C

Valve Gasket Set-Reference 1095

5960-16

Assemblies include all parts shown in frames.

12/09/2016

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
474C	592829	Alternator (9 Amp Regulated) Used on Type No(s). 0001, 0133.	510A	696541	Drive-Starter	578H	846899	Wire-Assembly (Used After Code Date 16063000). (Regulator to Starter Motor) Used on Type No(s). 0005, 0137.
474D	592830	Alternator (10 Amp Circuit)	513	692024	Clutch-Drive	582	807381	Clamp-Air Cleaner
474E	846882	Alternator Used on Type No(s). 0005, 0132, 0137.	515	691528	Spring-Pawl	592	690939	Nut (Rewind Starter) (M6)
474F	841178	Alternator (20/50 Amp) Used on Type No(s). 0006.	520	691084	Terminal-Ground	596	807389	Screw (Oil Pump)
479	843961	Screw (Screen-Oil Pump)	523	692101	Dipstick	600	845213	Spacer- Air Cleaner
480	806660	Screw (Hose-Purge Line) (M8x18mm Lg)	524	692053	Seal-Dipstick Tube	600A	843564	Spacer-Air Cleaner
493	845729	Bracket-Mounting	525	692093	Tube-Dipstick	601A	841597	Clamp-Hose
500	691086	Washer (Key Switch)	526	692067	Screw (Regulator)	601B	791850	Clamp-Hose
501	845907	Regulator	526A	690717	Screw (Regulator)	601C	691145	Clamp-Hose (Silver)
501A	794360	Regulator (10 Amp Regulated) Used on Type No(s). 0001, 0133.	526B	691547	Screw (Regulator)	608	841729	Starter-Rewind
501B	691573	Regulator (20 Amp) (Used Before Code Date 16070100). Used on Type No(s). 0005, 0132, 0137.	527	690423	Clamp-Tube	613	691902	Screw (Muffler)
501C	841170	Regulator (20-50 Amp) Used on Type No(s). 0006.	529	690744	Grommet	614	691550	Retainer- Governor Shaft
501D	593843	Regulator (20 Amp) (Used After Code Date 16063000). Used on Type No(s). 0005, 0132, 0137.	536	825117	Cleaner-Air	616	806685	Crank-Governor
503	845016	Strap-Starter (60mm Lg)	544		Armature-Starter (Service With 691564 Starter Motor Only)	628A	806660	Screw (Fuel Pump Bracket) (8M x 18mm Lg)
505	690238	Nut (Governor Control Lever)	544B		Armature-Starter (Service With 691564 Starter Motor Only)	633	690722	Seal- Choke/Throttle Shaft
506	807120	Screw (Carburetor Cover) (4M x 18mm Lg)	552	690701	Bushing- Governor Crank	633A	809641	Seal- Throttle Shaft
507	691972	Insulator	552A	806686	Bushing- Governor Crank	633B	809638	Seal- Choke Shaft
510	496881	Drive-Starter (Used Before Code Date 14052800).	562	690239	Bolt (Governor Control Lever)	633C	809644	Seal- Choke Shaft
			563	841735	Screw (Debris Screen Guard)	635	692076	Boot-Spark Plug
			565	690682	Stud (Oil Filter Adapter)	638A	691551	Washer (Cylinder Head Cover)
			573	841310	Plate-Back ----- Note ----- 841314 Plate-Back Used on Type No(s). 0006. 841127 Plate-Back Used on Type No(s). 0132, 3037.	643	692079	Retainer-Air Filter
			577	690795	Cable-Starter	643A	844932	Retainer-Air Filter
			578	844547	Wire Assembly (Used After Code Date 09100700)	649	842446	Stud (M8 x 61mm Lg)
			578A	692319	Wire Assembly (Used Before Code Date 09100800)	664	691087	Nut (Key Switch)
			578F	847479	Wire-Assembly (Used After Code Date 16063000). Used on Type No(s). 0132.			

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121 & 121C

Valve Gasket Set-Reference 1095

5960-17

Assemblies include all parts shown in frames.

12/09/2016

386700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
668A	691500	Spacer	801		Cap-Drive	879	807460	Cover-Carburetor
676	795036	Deflector-Muffler			(For Replacement	883A	806425	Gasket-Exhaust
677	690661	Screw			Starter Motor, Order	884	691956	Clamp-Muffler
		(Muffler Deflector)			Reference 309)	892	692318	Switch-Key
		(#8-18 X .375" Lg)	801B	691283	Cap-Drive	892A	847448	Switch-Key
		----- Note -----	802A	691286	Cap-End			(Waterproof)
		794845 Screw	803		Housing-Starter			Used on Type No(s).
		(Muffler Deflector)			(No Longer Available)			0003.
		(M4 X 13mm Lg)			(For Replacement	901	841735	Screw
678	841730	Spacer-Rewind			Starter Motor, Order	914	807120	Screw
683	845758	Nut			Reference 309)			(Rocker Cover)
		(Solenoid Terminal)	803A		Housing-Starter	918	791880	Hose-Vacuum
		(M6)			(No Longer Available)			(Cut To
		----- Note -----			(For Replacement			Required Length)
		691029 Nut			Starter Motor, Order	920	845757	Solenoid-Starter
		(Starter Solenoid			Reference 309)			Used on Type No(s).
		Terminal)	803B		Housing-Starter			0132, 3037.
		(1/4"-20)			(Service With 846451	920B	846820	Solenoid-Starter
691	842826	Seal-Governor Shaft			Starter Motor Only)			Used on Type No(s).
697	692062	Screw	813	690635	Clamp			0003, 0005, 0006,
		(Drive Cap)	813A	807377	Clamp			0007.
711C	691492	Screw	816	690706	Washer	930	846284	Guard-Rewind
		(Carburetor Shield)			(Oil Filter Adapter)			Used on Type No(s).
717	806440	Bracket-Air Cleaner	829	841999	Hose/Clamp Assembly			0007, 0008, 0010,
717A	843566	Bracket-Air Cleaner			(Cut To			0026, 0113, 0118,
718B	806469	Pin-Locating			Required Length)			0119, 0120, 0122,
727	841313	Cover-Starter Drive	830	809157	Stud-Rocker Arm			0123, 0127, 0132,
729B	690586	Clip-Wire	833	807163	Screw			1119, 1127, 3026,
732	690688	Screw			(Air Cleaner			3037.
		(Starter Drive Cover)			Mounting Strap/Stud)	934	691058	Screw
732A	841233	Screw	833A	841233	Screw			(Fan Retainer)
		(Starter Drive Cover)			(Air Cleaner	947	842109	Solenoid-Fuel
737	690679	Screw			Mounting Strap/Stud)			(5/6-24 Thread)
		(Oil Filter Adapter)	842	691870	Seal-O Ring			Without Wire Harness,
741	846085	Gear-Timing			(Dipstick Tube)			-Ref Item 789B)
783	695708	Gear-Pinion	851	493880s	Terminal-Spark Plug	947B	809632	Solenoid-Fuel
788	691559	Bracket-Fuel Pump	865	843768	Cover-Air Guide			(M8x1 Thread,)
789	695050	Harness-Wiring			(Black)			(With Wire Harness)
		Used on Type No(s).	868	691963	Seal-Valve	949	845728	Guard-Debris Screen
		0118.	871	692057	Bushing-Valve Guide	955	691511	Plug-Carburetor
789A	698332	Harness-Wiring	875	843563	Base-Air Cleaner			(M8x1 Thread)
		Used on Type No(s).			Used on Type No(s).	961	807084	Screw
		0007, 0008, 0010,			0026, 0119, 0120,			(Air Cleaner Bracket)
		0026, 0111, 0112,			0122, 0123, 0127,			(M6x14mm Lg)
		0118, 0119, 0120,			1119, 1127, 3026,			----- Note -----
		0122, 0123, 0126,			3037.			691593 Screw
		0127, 0128, 0131,	877A	393814	Wire/Connector-			(Air Cleaner Bracket)
		0134, 0135, 1021,			Alternator			(M6x12mm Lg)
		1119, 1127, 1131,			Used on Type No(s).			841233 Screw
		1292, 1293, 3026,			0116, 0117.			(Air Cleaner Bracket)
		3037.	877C	399916	Wire/Connector-			(M6x10mm Lg)
789B	844914	Harness-Wiring			Alternator	961A	692056	Screw
789C	691996	Harness-Wiring	877D	698092	Wire/Connector-			(Bracket-Air Cleaner)
797	693167	Nut			Alternator			(M8x14mm Lg)
		(Brush Retainer)	878	691362	Harness-Alternator	961B	807120	Screw
797A	691029	Nut			Used on Type No(s).			(Cyclonic Air Cleaner)
		(Brush Retainer)			0132, 0137.			(4M x 18mm Lg)

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121 & 121C

Valve Gasket Set-Reference 1095

5960-18

Assemblies include all parts shown in frames.

12/09/2016

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
964	590799	Cap-Connector	1023A	691558	Cover-Rocker (Cylinder #1) (With Fuel Pump)	1122	93410	Screw (Blower Housing Adapter)
964A	807468	Cap-Carburetor				1127	809715	Screw (Float Bowl) (Mount Float Bowl To Carburetor Body)
964B	809640	Cap-Carburetor	1024		Pump-Oil (For Replacement Sump-Engine, Order Reference 4) (Used Before Code Date 08022700).	1130	690869	Stud (Intake Manifold) (M6 x 112mm Lg)
967B	692520	Filter-Pre Cleaner (Round)			----- Note -----			----- Note -----
968	841822	Cover-Air Cleaner			843959 Pump-Oil (Used After Code Date 08022600).			842448 Stud (Intake Manifold) (M6 x 98mm Lg)
968A	842620	Cover-Air Cleaner	1025	690689	Spool-Governor	1135	806497	Washer (Crankcase Cover/Sump)
968B	808654	Cover-Air Cleaner (Used With Metal Air Cleaner Base)	1026	691836	Rod-Push (Intake)(Steel)	1155	806647	Washer (Oil Cooler)
971	690866	Screw (Air Cleaner Base to Carburetor) (M6 x 85mm Lg)			----- Note -----	1157	690713	Nut (Bell Crank)
971A	841853	Screw (Air Cleaner) (M6x103mm Lg)			691758 Rod-Push (Exhaust)(Aluminum)	1176	842067	Nut (Exhaust Manifold)
975A	844947	Bowl-Float	1027	842921	Filter-Oil (Premium, Black)	1254	807084	Screw (Rocker Cover Stud)
975C	809717	Bowl-Float	1028	843898	Adapter-Oil Filter	1315	842445	Hose-Air Cleaner
987	809639	Seal-Throttle Shaft	1029	807323	Arm-Rocker	1319	380764	Warning Label
987A	691000	Seal-Throttle Shaft	1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)	1328	716244	Cap-A/C Rain (Use with 4" A/C)
988	692063	Gasket-Oil Adapter			1046 841165 Plug-Blower Housing	1330	272144	Repair Manual
990	691959	Key Set			1051 690736 Ring-Retaining (Used Before Code Date 14052800).	1337	841233	Screw (6M x 10mm)
990A	691959	Key Set	1051A	691124	Ring-Retaining	1378A	847144	Washer/Nut Set
994	794945	Arrester-Spark	1051B	691265	Ring-Retaining	1392	690939	Nut (Rewind Guard) (Used on Type No(s). 0007, 0008, 0026, 0110, 0113, 0118, 0119, 0120, 0122, 0123, 0127, 0132, 1119, 1127, 3026.
996	843565	Shield-Carburetor Used on Type No(s). 0026, 0114, 0119, 0120, 0122, 0123, 0126, 0127.	1054	280275	Tie-Cable			1406 842623 Valve-Debris
		----- Note -----	1058	279765TRI	Operator's Manual	1425	844712	Hose-Purge Line (Cut To Length)
		845211 Shield-Carburetor Used on Type No(s). 1119, 1127, 3026.	1059	698516	Kit-Screw/Washer	1431	844035	Washer (Hose-Purge Line)
996A	845543	Shield-Carburetor	1090	496813	Retainer-Brush (Used Before Code Date 14052800).	1521	847150	Cap-Switch
1004B	690865	Duct-Air (Used With Metal Air Cleaner Base)	1090A	691293	Retainer-Brush			
1005	841439	Fan-Flywheel	1091	691515	Cap-Limiter			
1006	690452	Retainer-Fan	1095	842662	Gasket Set-Valve			
1009	691902	Screw (Starter) (M8 x 20mm Lg)	1100	791959	Pivot-Rocker Arm			
1017	843960	Screen-Oil Pump	1119	691552	Screw (Alternator)			
1022	806039s	Gasket-Rocker Cover	1121	810056	Nut (Fuel Pump Bracket)			
1023	843750	Cover-Rocker (Includes Breather Assembly)						

Engine Gasket Set-Reference 358
Carburetor Overhaul Kit-Reference 121 & 121C

Valve Gasket Set-Reference 1095

5960-19

Assemblies include all parts shown in frames.

12/09/2016

Not for
Reproduction

